■ 保管方法

- ○本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い 場所に保管してください。
- ○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。 火災の恐れがあり大変危険です。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、 お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの
 ○間違ったお手入れ、保管方法、経年変化による素材劣化
 ○乱暴な取り扱いによるもの
 ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

品番/品名:#1122736 グラウンドシート ムーンライト®キャビン 4用

素材:ポリプロピレン、ポリエチレン

○対応テント

○ムーンライト[®]キャビン4

mont.bell

取扱説明書

グラウンドシートムーンライト®キャビン4月

Moonlight Cabin 4 Footprint

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は 本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法 をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株) モンベル カスタマー・サービスまでお問い合わせく ださい。本説明書は大切に保管してください。

■ 特長

本製品はムーンライト®キャビン4のフロア(底部)を保護し、汚れを防ぐシートです。また、リビングスペー スに本製品をセットして使用することもできます。単体でレジャーシートとしてもお使いいただけます。 ※本製品にテントは付属しません。







■ 各部の名称

■ 安全上の注意 びずお読みください

※テント本体の取扱説明書に記載の注意事項を必ずお読みください。

⚠️ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- ○本製品の近くでは、絶対に火気を使用しないでください。火災や一酸化炭素中毒の恐れがあります。
- ○台風、落雷、強風、豪雨、大雪などの厳しい自然条件の際は、キャンプ場の管理担当者の指示に従い安全な場所に避難してください。
- ○河原や河川付近に設営する際は気象条件により突然増水することがあります。設営場所は特に注意してく ださい。

登書者 場合により人が死亡または重傷を負う可能性が想定される内容です。
最優または物的損害が発生する頻度が高いことが想定される内容です。

○本製品を設営される際は、周囲の環境や気象条件などを充分考慮し、安全を確認してください。

- ○本製品の設営の際は水はけがよく、出来るだけ平らな場所を選んでください。
- ○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に性能が発揮できない恐れが あります。
- ○使用前は毎回必ず点検をしてください。劣化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発 揮できない恐れがあります。

▲ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○稜線上や大木の近く、広い草原では落雷にも注意してください。

○設営地はできるだけ平坦で、危険のない場所を選んでください。

- ○テントと一緒に使用する際は必ずペグで固定してください。砂地や雪上では状況に応じたペグ等が別途必要です。
- ○本製品は太陽光線の紫外線により生地が劣化します。また、硫黄ガスが発生する温泉地等でも寿命を縮めますのでご注意ください。
- ○本製品に慣れるため、実際にフィールドへ出かける前に必ず試し張りを行ってください。
- ○小さいお子さまにペグ打ちの作業をさせないでください。

■ 使用方法

○インナールームのグラウンドシートとして使用

①インナールームの下に本製品を敷きます。プリント面が上側になります。

❷ポールがテント本体のポール受けに固定された状態のまま、ポールを本製品の四隅のポール受けに差し込みます。





○リビングスペースに使用

- ●テント本体のリビング側に本製品を敷き
- ます。

②インナールームにグラウンドシートをセットする時と同様の手順で、ポールがテント本体のポール受けに固定された状態のまま、ポールを本製品の四隅のポール受けに差し込みます。

※インナールームのグラウンドシートと併用 する場合は右下の写真のようにグラウン ドシート同士を重ねてセットしてください。









 ○使用後は、泥汚れなどをあらかじめ水洗いし、陰干しして乾燥後に収納してください。汚れたまま、あるいは 濡れたまま長時間放置するとカビの発生する可能性があり、また生地も劣化しやすくなります。
 ○ドライクリーニングや洗濯機による洗濯はできません。生地を傷める恐れがあります。

■ 使用前の点検

□ポール受けなどの破損がないか □生地に破れ、劣化がないか

Storage

OWhen storing for an extended period of time, store loosely in a well ventilated, cool, dry place out of direct sunlight. The footprint is not designed to be stored long term in the stuff sack that should only be used for transport.

To prevent deforming and damage, do NOT store near heat sources.

Disposal

OPlease follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specification

Style/Name #1122736 Moonlight Cabin 4 Footprint

Materials ; polypropylene, polyethylene

OMoonlight Cabin 4

mont.bell

User's Manual

Moonlight Cabin 4 Footprint

Moonlight Cabin 4 Footprint

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This product is designed as a footprint for the Moonlight Cabin 4, to protect its floor and prevent it from becoming dirty. Use it in the vestibule to make a dining/living area. Can also be used by itself as a tarp for picnics and other outings.

*Does NOT include tent.

Components

44-4234-2012





All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co., Ltd. 2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN www.montbell.com 4



Please read carefully. Safety Warnings

Before using, read the tent's User's Manual.

Under certain conditions, **DANGER!** use of this product can result in major injury or death.

- ONEVER place a flame source in or near your tent, tarp, or shelter. Injury or death by fire and/or carbon monoxide poisoning is possible.
- OFollow instructions of the campsite management for evacuation in severe weather conditions. such as typhoons, lightning, strong winds, heavy rains, or heavy snowfall.
- When setting up near river beds and rivers, always be aware that waters may rise depending on the weather conditions.

WARNINGS!

Under certain conditions, use of this product can result in injury. death, or property damage.

Always check the safety of the surrounding environment and weather conditions when setting up.

- OChoose an area that is as flat as possible with good drainage when setting up.
- Obo NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- OPrior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- OPlease follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

CAUTION!

Under certain conditions, use of this product can result in injury or property damage.

OBe careful of lightning in the mountains, when close to trees or in open fields.

- OChoose a campsite free of danger and as level as possible.
- OUse pegs and guylines to stake your tent, tarp, or shelter at all times. Pegs may not be suitable for all ground conditions, such as sand or snow. Before pitching, check ground conditions to see if staking pegs is possible.
- OUltraviolet rays from the sun can damage the product's fabric. Sulfur gas from natural hot springs can also shorten the product's lifespan.
- OBefore using the tent, tarp, or shelter for the first time, practice pitching at home to familiarize yourself with the product and its features.
- ODo NOT allow children to assemble the poles and stake pegs.

Prior to use, inspect this product for:

□ Cracks or damage to grommet □ Tears or damage to the fabric

Directions

OUsed as a footprint for the Inner Room

- Ospread out the footprint under the Inner Room. The side with the pattern should face up.
- **2**When the poles are secured in the tent's pole grommets, slide the footprint's grommets under the poles and insert each pole end into the footprint's grommet.





Tent's pole arommet Footprint's pole grommet

Inner Room

Oused as a ground sheet for the vestibule

- **O**Spread out the footprint inside the vestibule area.
- **2**When the poles are secured in the tent's pole grommets, slide the footprint's grommets under the poles and insert each pole end into the footprint's grommet.
- **%When using in combination with** another footprint for the Inner Room. make sure they overlap as shown in the picture below.







■ Care

Improper care and storage can shorten the lifespan of this product. To extend the lifespan of this product, please follow the recommendations below.

Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.

Obo NOT dry clean or wash in washing machine. This can damage the fabric.