■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

本製品の誤った使用方法によるもの間違ったお手入れ、保管方法、経年変化による素材劣化①乱暴な取り扱いによるもの〇その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション(別売)

本製品は下記の別売のオプションを利用することができます。

- メッシュアンカー ステンレスペグ20、30 付属のペグが使用できない河原やガレ場でのタープの固 ● ショックレスペグハンマー 定に使用します。
- アルミタープポール 用途に応じてお選びいただくことで居住性を高めることが できます。





○素材

○本体:68デニール・ポリエステル・リップストップ [耐水圧 1,500mmウレタン・コーティング、難燃加工]
 ○ポール:アルミニウム合金

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

#式会社 モンベルレ 本社 〒550-0013 大阪市西区新町2-2-2 モンベルホームページ https://www.montbell.jp/ 商品についてのお問い合わせはカスタマー・サービスまで Tel. 06-6531-3544 フリーコール:0088-22-0031 8 44-4611-2205

mont-bell _{共通取扱説明書} マルチシェード

Multi Shade

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は 本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法 をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株) モンベル カスタマー・サービスまでお問い合わせく ださい。本説明書は大切に保管してください。

■ 特長

本製品は、設営が容易で様々な使用シーンに対応する半自立式タープです。 庇 (ひさし) の開閉により、様々 な使い方ができるため汎用性に優れています。



■ 安全上の注意 必ずお読みください 〕

▲ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

○本製品内や本製品の近くでは、絶対に火気を使用しないでください。火災や一酸化炭素中毒の恐れがあります。
 ○出入り口やベンチレーション (Sのみ)を常に開け、換気に充分ご注意ください。

○台風、落雷、強風、豪雨、大雪などの厳しい自然条件の際は、キャンプ場の管理担当者の指示に従い安 全な場所に避難してください。

○河原や河川付近に設営する際は気象条件により突然増水することがあります。設営場所は特に注意してください。

登書告 場合により人が死亡または重傷を負う可能性が想定される内容です。 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品を設営される際は、周囲の環境や気象条件などを充分考慮し、安全を確認してください。
 ○出入口は風下側を選び設営してください。強風で本製品が飛ぶ恐れがあります。

- ○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に保護能力が発揮できない恐れがあります。
- ○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は 直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発 揮できない恐れがあります。

/ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- ○稜線上や大木の近く、広い草原では落雷に注意してください。
- ○キャンプ場やキャンプ許可地以外では使用しないでください。
- ○設営地はできるだけ平坦で、危険のない場所を選んでください。
- ○使用の際は必ずペグと張り綱で固定してください。砂地や雪上では付属のペグが使用できない場合があり
- ます。あらかじめ設営する場所の地面の状態を確認してください。
- ○本製品は太陽光線の紫外線により生地が劣化しますので、常設用として使用し続けないでください。
- ○硫黄ガスが発生する温泉地等での使用は、生地の劣化を促進させますのでご注意ください。
- ○各パーツや付属のペグには鋭利な部分があります。取扱いにご注意ください。
- ○ポールを伸ばす際は周囲に十分に注意してください。近くに人がいないことを確認してください。
- ○ポールをタープ本体に取り付ける際はポールの跳ね返りに注意してください。
- ○小さいお子さまにポールの組立てや、ペグ打ちの作業をさせないでください。
- ○タープ本体の生地には防水加工が施されています。外気との温度差が大きいと、結露によって生地の内側の壁面に水滴がつくことがあります。これは水漏れではありません。本製品の換気を行うことで改善することができます。
- ○ポールを組み立てる際は、奥まで差し込んでください。奥まで 差し込まないとポールが破損する恐れがあります。また、指を 挟まないようにしてください。
- ○ショックコードを必要以上に伸ばさないでください。ポールが跳 ね返った際、衝撃でポール先端が破損する恐れがあります (右図参照)。
- ○濡れたままで長時間他のものや各パーツを一緒に置いて おくと色が移る恐れがあります。



■ 使用前の点検

□ポールに亀裂などの破損がないか

□生地に破れがないか

■ 使用方法

○ 組み立て方法

新しいタープに慣れるため、実際にフィールドへ出かける前に、必ず試し張りを行ってください。

●ねじれのないように注意してフロアテープを広げてください。この時、ゴムループが上になるようにしてく ださい。



2ポールは、中に通っているショックコード通りにポールをつなぎ合わせる(図A)と自然に組み上がります。ジョイントへのポールの接続は(図B)のように行います。ポールがジョイントに確実に入っていることを確認してください。※ショックコードを必要以上に伸ばさないように注意してください。



③それぞれのポールを写真のようにフロアテープの上に並べ、センターポールをAフレームのジョイント に差し込みます(図C)。その際Aフレームが写真のように外側に向くようにに注意してください。



④③で組み立てたフレームをフロアテープのポール受けにそれぞれ差し込みます(図D)。





センターポールがAフレー ムのジョイントから抜けな いように注意してください。 ⑤タープ本体をフレームにかぶせます(図E)。



⑤タープ本体裏側のフックをセンターポールの両端の穴にかけます(図F)。



⑦タープ本体裏側のベルクロでフレームと固定します(図G)。



③タープ本体四隅のフックをフロアテープのゴムループにかけます(図H)。



●フロアテープのペグ用ループをペグで留めます(図Ⅰ)。 ※ペグで留める際は、ペグをこれ以上打ち込めない深さまで、打ち込んでく ださい。

※付属のペグが使用できないガレ場や雪面では別売のメッシュアンカーな どを用いて固定してください。



①タープ本体の張り綱は風が吹くことを想定して必ず取り付けてください。張り綱をペグで固定します (図 J)。付属の張り綱はランナー(自在金具)がついており、ランナーを通したループをペグにかけて 長さを調節します(図 K)。なお、このタープにハンマーは付属していません。 ※ペグで留める際は、ペグをこれ以上打ち込めない深さまで打ち込んでください。



○ 収納方法

- ●ペグを抜きます。その際、ペグは必ずペ グ用収納袋に入れてください。そのまま 収納すると本体生地を傷つけることがあ ります。
- **2**タープ本体裏側のフックを外してください。
- ③タープ本体のベルクロをフレームから外してください。
- ●タープ本体をフレームから取り外します。
 ●ポールの先端をポール受けから外します。
 ▲の際ポールが聞わ返るとを除ですの
- その際ポールが跳ね返ると危険ですの で、ポールが伸びきるまで手を離さないで ください。



- ●ジョイントからポールを抜き、ポールの真ん中から折りたたむようにします(図L)。こうすることにより、ショック コード全体に均一にテンションがかかり、ショックコードの寿命を伸ばすことができます。
- ⑦タープ本体を収納袋の幅に合わせて畳み、収納します。

○ さまざまな使用方法

- 本製品はキャンプスタイルに合わせて出入口をアレンジすることができます。 ※前方を上げた際は、風や雨に対して弱くなるため、ご注意ください。
- ■片方の庇 (ひさし)を庇 (ひさし) 用ポールを 使用して開く





■両方の庇(ひさし)を張り網を使用して開く



■片方の庇(ひさし)をポールを使用して開き、 片方の庇(ひさし)を張り網を使用して開く



■入り口を開く







庇(ひさし)の作り方

①出入口のジッパーを開きます。庇(ひさし)の先端 に付いている2箇所(Lは3箇所)のグロメットに庇 (ひさし)用ポールを挿します。



❷張り綱を斜め45度に引き、ペグで固定します。



○破損時の対応 -

1.ポール —

タープ設営時に強風や豪雪などの理由で本製品の ポールが万一破損した際は、右図の通り応急処置 をしてください。副木を添えて応急処置をすること もできますが、本製品の付属品であるポール応急 補修用パイプを用い応急処置も可能です。



2.タープ本体

生地の破損についてはリペアシート (別売) をご用意しております。 ※使用後は修理を依頼してください。販売店もしくは (株) モンベル カスタマー・サービスにお問い合 わせください。

■ お手入れ方法 問違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

- ○使用後は、泥汚れなどをあらかじめ水洗いし、陰干しして乾燥後に収納してください。汚れたまま、あるいは 濡れたまま長時間放置するとカビの発生する可能性があり、また生地も劣化しやすくなります。
- ○長期の使用により、タープ本体のはっ水性能 (水を弾く力) が低下した場合は別売のはっ水スプレーをご 使用ください。
- ○ドライクリーニングや洗濯機による洗濯はできません。生地を傷める恐れがあります。
- ○ジッパーの動きが固くなりましたら、別売りのスムーススライダー™やローソクのロウを塗ると回復します。
- ○ポールやペグは汚れを濡れタオルで拭き取った後、機械油を薄く塗っておきます。ポールは接合部にのみ、
 塗布します。

■ 保管方法

- ○本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い 場所に保管してください。付属の収納袋は、携行性を重視しているため、きつめにたたまないと入らない ので使用を避けてください。
- ○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Accessories (Sold separately)

The following accessories are available for use with this tent.

Mesh Anchor An anchor for use in rocky terrain. Stainless Peg 20,30

Shockless Peg Hammer

Aluminum Tarp Pole

Choose from various length poles to enhance your camp comfort.

Specifications



OMaterials

- \bigcirc Main: 68-denier polyester ripstop (urethane coating, water pressure resistant to 1,500mm, flame resistant)
- \bigcirc Poles: aluminum alloy with internal shock cord and socket

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.



mont-bell ^{User's Manual} Multi Shade

Multi Shad<u>e</u>

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Enjoy easy setup in a semi-freestanding design. Adjustable awnings allow pitching in a variety of configurations, delivering excellent multipurpose use.

Components



Safety Warnings! Please read carefully.

DANGER! Under certain conditions, use of this product can result in major injury or death.

- ONEVER place a flame source in or near your tent, tarp, or shelter. Injury or death by fire and/or carbon monoxide poisoning is possible.
- \bigcirc Ventilate the tent, tarp, or shelter at all times by keeping ventilators (S size only) or awning(s) open.
- ○Follow campsite instructions for evacuation and safety procedures when encountering harsh weather conditions such as typhoons, lightning, strong winds, heavy rain or snow.
- Owhen selecting a campsite near rivers or river beds, please take into consideration that weather conditions can cause rivers to flood suddenly.

WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

- \bigcirc When selecting a campsite, check the safety of the surrounding area and be aware of weather conditions.
- OWhen selecting a campsite, place the entrance of the product downwind. Be aware this product can be blown away by strong winds.
- ODo NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- OPrior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- OPlease follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- \bigcirc Be careful of lightning in the mountains when close to trees or in open fields.
- Only pitch tents, tarps, or shelters in areas designated for camping.
- OChoose a campsite free of danger and as level as possible.
- OUse pegs and guylines to stake your tent, tarp, or shelter at all times. Pegs may not be suitable for all ground conditions, such as sand or snow. Before pitching the tent, check ground conditions to see if staking pegs is possible.
- Olltraviolet rays from the sun may damage the product's fabric. Leaving the product outside for extended periods of time may cause the product to deteriorate rapidly.
- OSulfur gas from natural hot springs can also shorten the product's lifespan.
- OBe careful when handling pegs or parts included in the product as they can have sharp edges.
- Owhen assembling the poles, make sure the area is clear and be careful of other people in the area.
- OWhen attaching poles to the tent, tarp, or shelter, be careful of recoil.
- ODo NOT allow children to assemble the poles or stake pegs.
- OThe tarp has a waterproof urethane coating. Depending on the difference in temperature and humidity, water may condense on the inside of the tarp. This does not mean the tarp is leaking. Condensation can be prevented with adequate ventilation.
- Owner assembling the poles, make sure all sections are fully inserted and be careful of pinching your fingers in between pole sections.

Recoil

A→Pole damage

Clang

6

- ODo NOT pull the shock cord more than necessary. Recoil can damage poles as seen in the figure to the right.
- OColors can transfer when allowed to sit for an extended period of time while wet.

Prior to use, inspect this product for: Stop using immediately if you notice any irregularities.

 \Box Cracks or damage to poles. \Box Tears or damage to fabric.

Directions

\bigcirc Pitching the tarp

Before using the product for the first time, practice pitching at home to familiarize yourself with the product and its features.

•Spread out the floor strap with the elastic loops facing up while making sure there are no twists in the strap.



Assemble the poles (Fig. A). Insert the poles into the sockets on the joints to make the A-frame (Fig. B). Make sure the poles are securely inserted into the sockets. *Do NOT pull the shock cord more than necessary.



Place the poles over the floor strap as shown in the leftmost picture. Next, insert both ends of the center pole into the A-frame joints (Fig. C). Make sure the A-frames are facing the correct direction.



After assembling the frames, insert the pole ends into grommets on the floor strap (Fig. D.)





Make sure the center pole does not come loose from the A-frame joints.



SPlace the tarp over the frame (Fig. E).



6 Secure the hooks on the inner side of the tarp to the ends of the center pole (Fig. F).



OFasten the tarp to the frame using the hook-and-loop straps on the inner side of the tarp (Fig. G).





Secure the hooks on the corners of the tarp to the elastic loops on the floor strap (Fig. H).



Stake down the tarp using the peg loops on the corners of the floor strap (Fig. I).

*When staking a tarp in rocky or snowy conditions, consider using the Mesh Anchor or Snow Anchor (both sold separately).



OAlways secure the tarp with guylines to be prepared for windy conditions. There are 6 guylines on the tarp that need to be staked down with pegs (Fig. J). Adjust the position of the cord runner to tension the guyline (Fig. K). This tarp does NOT include a hammer for staking the pegs.
*Stake pegs as deep as possible.





*The number and location of guylines will change depending on the configuration.

(Fig. L)

- Taking down the tarp
 - Pull up all the pegs. Put pegs in their stuff sack. Pegs should not have direct contact with the tarp, as the edges could potentially damage the fabric.
 - Ounclip the tarp's hooks from the elastic loops
 - **3**Remove the tarp's hook-and-loop straps from the pole.
 - **4**Remove the tarp from the frame.
 - Remove the ends of the poles from the grommets. Firmly hold the poles until the poles are no longer at tension as there is a risk of injury due to recoil.
 - **(3)**When taking apart the poles, remove the pole sections from the socket and then break down the poles starting at the middle (Fig. L). This extends the life of the shock cord by placing an even amount of tension over the entire length of the cord.
 - **O**Fold the tarp into the same width as the carrying case for easier storage.

○ Pitching in various configurations

Pitch the tarp in the configuration best suited to your camp conditions. *Be aware that when the awning is raised, it will be susceptible to wind and rain.

One awning opened with awning poles

Shelter





rom the frame. s of the poles from the hold the poles until the

Both awnings opened with guylines







Entrance opened



Both awnings fully opened %Requires additional awning poles (sold separately).



Setting up the awning

Open the zipper on the entrances. Insert the awning poles into the two grommets (three for L model) on the edge of the awning.



Peg down the guylines so they are at a 45° angle to the ground.



○ Emergency Repair —

1.Pole

In case strong wind or heavy snow breaks a pole, temporarily fix the pole as shown on the right. Although it is possible to use a splint to do the job, we recommend using the pole repair sleeve that is included in this product.



2.Tarp -

If the tarp fabric is damaged or tears, temporarily apply the Repair Sheet (sold separately). *Afterwards, contact the store of original purchase or Montbell Customer Service for information on permanent repair.

Care

Improper care and storage can shorten the lifespan of this product. To extend the lifespan of this product, please follow the recommendations below.

OWash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool wellventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.

Over time the product's water repellent treatment will deteriorate. To restore the product's water repellent abilities, reapply a water repellent spray (sold separately).

ODo NOT dry clean or wash in a washing machine. This can damage the product's fabric.

- Olf zipper movement becomes stiff, use the Smooth Slider (sold separately) or candle wax to restore functionality.
- ⊖Use a damp cloth to clean poles and pegs. Afterwards apply a silicone lubricant. For poles, only lubricate the joints.

Storage

OWhen storing for an extended period of time, store loosely in a well-ventilated, cool, dry place out of direct sunlight. Tarps are not designed to be stored long term in their carrying cases that should only be used for transporting the tarp.

 \bigcirc To prevent deformation and damage to the tarp, do NOT store near heat sources.

Disposal

OPlease follow local regulations regarding waste disposal.