■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

○ご使用後はシャフトとブレードを分解し、水洗いをして泥などを落とし、乾燥させてください。

○繰り返し使用していくとジョイント部分が固くなることがあります。その際は市販のシリコンスプレーをジョ イント部分のみに塗布してください。

■ 保管方法

○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。
○保管場所は直射日光の当たらない風通しの良い場所を選んでください。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの ○間違ったお手入れ、保管方法、経年変化による素材劣化

○乱暴な取り扱いによるもの ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

品		番	1124576	1124577
品		名	アルパイン スノーショベル	コンパクト スノーショベル
素		材	シャフト/ブレード:アルミニウム合金 グリップ:ポリカーボネイト	
使	用	長	67cm、83cm	54cm、66cm
収	納	長	49cm	38cm
ブレ	ノート	《斗	31cm(タテ)×26cm(ヨコ)	27cm(タテ)×21cm(ヨ⊐)

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

#式会社 モンペル 本 社 〒550-0013 大阪市西区新町 2-2-2 Tel. 06-6531-3544 フリーコール: ⑥ 0088-22-0031 商品についてのお問い合わせはカスタマー・サービスまで モンベルホームページ http://www.montbell.jp

4





Snow Shovel

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本 製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法を ご確認ください。

ただし、本説明書は本製品の基本的な使用方法を示すものであり登山、雪山での救助方法を解説するもの ではありません。安全な条件のもとで十分な練習を行い、正しい使用方法を習得してください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせくだ さい。本説明書は大切に保管してください。

■ 特長

アルパイン スノーショベル:握りやすい D 型ハンドル。大きなブレードで除雪能力の高い雪用ショベルです。 コンパクト スノーショベル:コンパクトな T 型ハンドル。収納性に優れる雪用ショベルです。

■ 各部の名称



1

■ 安全上の注意 ぶずお読みください

危険人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

○雪山・冬山での登山・スキーなどのアウトドアスポーツは危険が伴います。この取扱説明書を読み、全ての 内容を理解し、製品の正しい使い方を習得してください。また、実際の現場においては、冬山の経験者の 指導のもとに、使用方法を十分ご理解の上でご使用ください。ここに示した警告を守らなかった場合、重 大な事故につながる恐れがあります。この際、弊社では一切の責任を負いかねますので、ご了承の上、ご 使用ください。

○本製品は登山、スキー用の雪用ショベルです。その他の用途には使用しないでください。

登会 場合により人が死亡または重傷を負う可能性が想定される内容です。 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

□ひびや変形が見られないか

○ブレードのエッジは鋭利になっています。移動の際、使用の際は周囲の人や物に危害を加えることのないよ う十分気をつけてください。

○本製品の改造や分解などは絶対にしないでください。性能が損なわれる恐れがあります。

- ○使用前には毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合 には直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○積雪時等、気温の低い状況で金属部分に素手で触れないでください。手が張り付くことがあります。
- ○ブレードとシャフトおよびシャフト同士の固定はラチェットボタン方式です。 使用前には完全に固定されている か必ずご確認ください。完全に固定されていないと破損や抜けの原因となります。
- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発 揮できない恐れがあります。



■ 使用方法 ※説明はアルパインスノーショベルで行っています。

○ 組み立て方法 -

①ラチェットボタンを押し 2ラチェットボタンを押し ながらブレードの根元 て、シャフト中間の穴に 部分の穴にシャフトの ラチェットボタンが出るま 下部を差し込みます。 で、シャフトを伸ばします。

ラチェットボタンを押し込み、シャフトを縮め、

シャフトとブレードを分離してください。



ブレードの穴とグリップにカラビナ・細引き等 (別売)を通して、携行することができます。 ※本製品以外のものは付属していません。



○ レスキュー用途として –

本製品のブレードの穴とスキー・細引き(別売)を利 用して、下図のようにレスキュー用のそりを作ること ができます。

※下図はアルペンスキーでの使用例です。 ※本製品以外のものは付属していません。



Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

 \bigcirc Separate blade and shaft, wash with water and air dry.

ORepeated use will cause the joints to become stiff. Apply a silicone lubricant to joints only.

Storage

 \bigcirc To prevent deforming and damage to the product, do NOT store near heat sources.

Ostore in a well ventilated, cool, dry place out of direct sunlight.

Disposal

OPlease follow local regulations regarding waste disposal.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#	1124576	1124577
Name	Alpine Snow Shovel	Compact Snow Shovel
Material	Shaft/Blade: Aluminum Alloy Grip: Polycarbonate	
Deployed length	67cm、83cm	54cm、66cm
Collapsed length	49cm	38cm
Blade dimensions	31x26cm	27x21cm

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.



mont.bell User's Manual

Snow Shovel

Snow Shovel

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

Please understand this manual only explains how to use the product and does not go into detail regarding using the product safely, safe mountaineering practices or snow rescue. You are personally responsible for learning the proper techniques and safety procedures for using this equipment.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Alpine Snow Shovel: The D-grip handle is easy to handle and the blade is more than large enough to easily move large amounts of snow.

Compact Snow Shovel: The T-grip handle has a very low profile which is part of the lightweight and extremely compact design.

Components



Safety Warnings! Please read carefully.

Under certain conditions, **Danger!** use of this product can result in major injury or death.

Alpine climbing and skiing are an inherently dangerous activities. Even if this product is used, cared for, and stored correctly, it will not completely eliminate the risk of major injury or death. You are responsible for your own actions and decisions. Receiving instruction on the correct usage of this product from an experienced individual in real world conditions is highly recommended. Montbell Co. LTD is not liable for damages or accidents resulting in injury or death resulting from improper usage.

○This product is intended to be used in mountaineering and skiing situations. Do NOT use for any other purpose.

Under certain conditions, use of this product can result in injury, Warnings! death, or property damage.

OBlade is sharp. During transport and when in use, be careful of those around you to prevent injury.

- ODo NOT alter or modify the product in any way. Alterations and modifications can negatively affect performance.
- OPrior to use, check the product's condition and stop using immediately if you notice or suspect any damage or irregularities.
- Ouring cold weather, it is possible for exposed skin to freeze to the metal parts of this product. Do NOT use shovel with bare hands.
- \bigcirc The blade and shaft are secured in place using the ratchet buttons. Before using, make sure the blade and shafts are locked in place. If blade and shaft are not properly secure, use can result in injury.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

Under certain conditions, use of this product can result in injury **CAUTION!**

or property damage.

Only use for shoveling snow.

ODo NOT use to shovel dirt or sand. Shaft and blade can bend and become damaged.

OBe careful of losing the blade or shaft when collapsing or storing.

Prior to use, inspect this product for:

Cracks or damage.

Directions *The following instructions are for the Alpine Snow Shovel.

O Deployment

OPress and hold in the ratchet button and insert the shaft into the blade until it locks in place.

2Press the ratchet button and extend the shaft until the shaft locks in place.

○ Collapsing

Press the ratchet button and collapse the shaft. Then push the ratchet button at the base of the blade to separate the blade and shaft.



Ratchet button Ratchet button

Ratchet button Ratchet button

 Transport Configuration (one example) Attach a carabiner to one of the blade holes and connect it to the handle using a piece of cordage.

*Carabiner and cordage are sold separately.



C Emergency Sled Configuration

The illustration below shows how the blade and shaft can be used in combination with cordage to create a sled for emergency evacuations. *Illustration shows alpine skis. *All items below are sold separately.

