

EXCELOFT Air Pad Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます) は本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用 方法をご確認ください。なお、ご不明な点等ございましたら、販売店もしくは(株) モンベル カスタマー・ サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品は、優れた断熱性を備えた軽量スリーピングパッドです。高い保温力と濡れにも強い中綿素材「エクセロフト®」を内部に配し、気温の低い時季にも使用することができます。独自のU.L.コンフォートシステムにより、本製品に枕を固定させたり長さの異なるパッドなどを連結できます。寝返りで枕がずれたり、すき間を作ることがないため、快眠を妨げません。また、ポンプバッグ(別売)を使用することで、簡単に空気を入れることもできます。

各部の名称 ※イラストはエクセロフト®エアパッド180で説明しています。



 収納袋
 パッチ(小)×4
 パッチ(大)×2
 接着剤
 弁(交換用)

1

■ 安全上の注意 びずお読みください

○本製品を絶対に浮き袋の代わりに使用しないでください。

⚠️ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を 発揮できない恐れがあります。
- ○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に機能が発揮できない恐れ があります。
- ○本製品を使用する際は、表地に直接頭部や肌があたらないようにタオルなどをかぶせて使用することをお 勧めします。整髪料や頭部の皮脂などが本製品に染み込み、生地の剥離を促進する恐れがあります。
- ○高圧ポンプやコンプレッサーを絶対に使用しないでください。破損の恐れがあります。
- ○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○本製品の設置場所にトゲのある茂みや尖った石などがないかを常に確認してください。パンクの原因となります。
- ○本製品を地面に直に置いて使用しないでください。テントの中で使用するなど、保護のために本製品の下にグラウンドシートなどを敷いてください。
- ○空気を限界まで封入した状態で急激な圧力を加えないでください。パンクの原因となります。
- ○本製品を火気や熱いものに近づけないでください。本体、フラットバルブの変形や損傷の原因となります。また、使用直後の火器(コンロ、ランタンなど)が本製品に触れないよう十分にご注意ください。
- ○本製品をご使用中の喫煙はお避けください。落下した灰が生地を傷める恐れがあります。
- ○気温の高い日に膨らませてフラットバルブを閉めた本製品を車内やテント内に放置することはお避けください。パンクの原因となります。
- ○本製品を長期間直射日光に晒さないでください。紫外線劣化により本製品の耐久性が損なわれる恐れが あります。
- ○本製品はペットが触れることのできない場所に置いてください。ペットが噛みついたり、本製品に爪が引っ 掛かったりすることで穴が開く恐れがあります。
- ○使用時は身につけている金具に注意してください。就寝中にズボンのバックルなどが生地を傷める恐れ があります。
- ○本製品を収納する際は、十分乾かしてから収納してください。生地の劣化やカビの原因になります。



使用にあたっては、毎回必ず次のことを確かめてください。 異常が見られた場合は使用しないでください。

□穴が開いていないか
 □フラットバルブが破損していないか

□生地が剥離していないか
□空気が漏れていないか

■ 使用方法 ※イラストはエクセロフト®エアパッド180で説明しています。

○ 空気の入れ方

息を吹き込むか、ポンプバッグ(別売)を使用して空気を入れます。空気の量はお好みで調節してください。 本製品は完全に膨らませず、空気の封入量を8割程度にすることをお勧めします。適度に体が沈むことで横 になった際、安定感が損なわれず快適な寝心地を得られます。



バルブ部分の断面図

ピローストラップ

弁の交換方法

弁が傷んで空気漏れ等の不具合が生じた際は、補修キットの弁と交換してください。万一、弁が外れた場合は❸ からの手順で取り付けてください。パーツが小さいため、必要に応じてピンセットなどをご使用ください。



❷持ち上がったBを持ち、Dの穴から引き抜き、古い 弁を取り外します。



▲Aを持ち、しっかりDの穴から引き出します。その 際、Cの膨らんだ部分を穴から完全に出してくださ い。完全に出さないと、弁が本製品の内側へ脱落 する恐れがあります。





- 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。 ■ お手入れ方法
- ○汗や皮脂などの汚れが付いた際は、ご使用後すぐに中性洗剤で洗ってください。 汚れを放置すると、それらが染み込むことで生地が剥離して空気漏れの原因になります。
- ○本製品を最大限に膨らませた状態でフラットバルブをしっかりと閉じます。毛の柔らかいブラシと、家庭用の中性 洗剤を用意し、ぬるま湯(30℃以下)で洗ってください。洗浄後は十分にすすぎ、完全に乾燥させてください。

■ 保管方法

- ○風通しがよく、湿度が高くならない場所で、直射日光を避けて保管してください。
- ※本製品の経年劣化を早める恐れがあります。以下のような場所に保管しないでください。
 - ・直射日光のあたる庭の物置 ・車内や車のトランクなど高温になる場所
- ○長期間保管する場合は、パッドを広げ、フラットバルブを開いたまま湿気のない場所で保管してください。
- ○本製品を濡れたまま長期間放置しないでください。生地を傷める恐れがあります。
- ○保管時は刃物や鋭利な物と接触させないでください。

から通します。



- ●Aを3mm程度残すようにカットします。Cの部分 までカットしないよう注意してください。Aをカット することで、キャップとの干渉を防ぎます。
- ❸Dを指で持ち上げ、Dの穴に新しい弁のAを下 ○本製品の誤った使用方法によるもの
 - ○乱暴な取り扱いによるもの ○その他、製造上の欠陥以外の原因によるもの 破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきまし

○間違ったお手入れ、保管方法、経年変化による素材劣化

■ オプション(別売) 本製品は下記のオプション(別売)を利用できます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

●ポンプバッグ

廃棄方法

■ アフターサービス

本製品に簡単に空気を入れることができます。

ては、弊社の裁量にて判断させていただきます。

○廃棄方法はお住まいの自治体の収集方法に従ってください。

い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

ジョイントシステム対応モデル

- U.L. コンフォートシステム エアパッド / アルパインパッド ※エアパッド・アルパインパッドと連結できます。長さが異なるパッド同十も連結できます。
- U.L. コンフォートシステム ピロー ※エクセロフト®エアパッド 180には連結できません。
 - (パッド本体のピローストラップを使用して固定はできます。)

■ 仕様・サイズ

耊 材: (表地) 30 デニール・ポリエステル・リップストップ [TPU ラミネート] (中綿) エクセロフト[®] [ポリエステル]

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

#式会社 モンベル 本社 〒550-0013 大阪市西区新町2-2-2 https://www.montbell.ip/ 商品についてのお問い合わせはカスタマー・サービスまで Tel.06-6531-3544 フリーコール:0088-22-0031 6

mont-bell User's Manual

EXCELOFT Air Pad Series

EXCELOFT Air Pad Series

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Features

Features heat-retaining and quick-drying Exceloft synthetic insulation to provide lightweight performance along with warmth and comfort even in colder temperatures. Montbell's proprietary U.L. Comfort System enables compatibility with other pads of various lengths and a pillow, securely holding in place to prevent gaps from forming while sleeping. Use the Pump Bag (sold separately) to easily inflate.

Components *EXCELOFT Air Pad 180 is illustrated.



Repair kit



Safety Warnings! Please read carefully.

 \bigcirc Do NOT use as a flotation device.

CAUTION: Under certain conditions, use of this product can result in injury or property damage.

death, or property damage.

○Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

Under certain conditions, use of this product can result in injury.

- ODo NOT modify or alter this product. Improper modifications and alterations can damage the product and impair function.
- ODo NOT allow pad to come into direct contact with the head or skin. Hair oils and the skin's natural oils can soak into the material and cause it to prematurely break down. Use a barrier to prevent direct contact, such as a towel or sleeping bag.
- ODo NOT inflate with an air compressor.
- ○Prior to use, check the pad's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- Olt is important to use caution when around sharp objects (thorns, branches, stones, cacti, etc), that may puncture the material.
- OWhen not sleeping in a tent, use a ground cloth to protect the pad.
- \bigcirc Do NOT apply sudden pressure to pad when fully inflated. May cause the pad to rupture.
- OKeep this product away from flame sources, such as campfires, to prevent damage and warping due to heat. Do NOT set hot objects (such as a hot stove or lantern) on top of the pad.
- ODo NOT smoke over the pad. Hot ash can damage the fabric.
- ○Do NOT leave inflated pad inside a tent or car during hot weather. May cause the pad to rupture.
- OAvoid long-term exposure to sunlight. Ultraviolet light can damage the material.
- OStore out of the reach of pets. Pets can bite or claw the material, causing holes.
- ○Avoid wearing metal objects when using, such as a pair of pants with buckles. May damage the pad while sleeping.
- ODry this product thoroughly before storing. If stored while wet, mold may form and the fabric may deteriorate prematurely.

Frior to use, inspect this product for: any irregularities.
Prior to use, inspect this product for: Stop using immediately if you notice any irregularities.

─Punctures
─Damage to the valve

□Fabric peeling
□Air leakage

Directions *EXCELOFT Air Pad 180 is illustrated.

⊖ How to inflate

Open the valve and either blow into the pad or use the Pump Bag (sold separately) to inflate to personal preference. It is recommended to inflate the pad to 80% of maximum capacity. The body should slightly sink into the pad, resulting in comfort and stability.

1

Inflating

repositioning throughout

the night and allows for

uninterrupted sleep.



Loop a toggle through

the eyelet

Deflating the pad

Open the valve cap and insert the cap's tab into the valve to create a gap in the seal for air to escape. Fold up and then push the air out of the pad using your weight.





③Firmly roll up from the side opposite the valve. While rolling up the pad, push out remaining air.

• After deflating the pad completely, secure the valve cap and secure the pad with the pillow strap.





Pillow strap

SPut the pad into its stuff sack. Take caution not to puncture the pad during transport.

Repairing —	
Punctures (pin hole sized)	
unctures (pin noie sized)	

If the pad is punctured (pin hole sized), use the included repair kit to patch the hole. For larger holes, contact the store of original purchase or Montbell Customer Service.

- •First locate the puncture. If you cannot find the hole, inflate the pad and then coat any suspicious areas with soapy water. Pressure from the inside should cause the soapy water to bubble, showing you the location of the puncture.
- **2**If using the procedure in step **1**, make sure the pad is thoroughly rinsed, completely dry and
- Opply the adhesive to the puncture and the area around it, and allow 5 minutes to dry. Make sure the area covered by the adhesive is larger than the patch. (It is possible to cut the included patches to a desired shape. Make sure to avoid rectangular shapes; the corners have

OPeel the backing off of the patch and firmly press the patch directly onto the puncture. Hold patch in place for a few minutes.

5Let dry for at least 8 hours.

6 Check to see if your repair was successful, or if there are more punctures.

Use the method below to replace the seal if it becomes damaged or detached.

Parts are small. Use tweezers if necessary.



2Pull the seal (B) out of the seat (D).



4Firmly hold the seal stem (A) and pull through the hole in the seat. Make sure the bulb on the stem (C) completely passes through the hole. This bulb prevents the seal from becoming loose and falling into the pad.





Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

Olf perspiration or the skin's natural oils come into contact with the product, wash with a mild soap. Contact can cause the material to break down prematurely.

OInflate the pad to its maximum capacity and close the valve cap. Wash using a soft brush, mild soap and lukewarm water (below 30°C). Rinse thoroughly and allow to air dry before storing.

Storage

Ostore in a well-ventilated, cool, dry place out of direct sunlight.

The following storage methods can cause this product to deteriorate guickly.

- -Any area that receives exposure from direct sunlight.
- -A car trunk or other area subject to high temperatures.

OFor long term storage, store in a dry place with the pad spread out with the valve open.

Ory thoroughly before storing. Molding and premature fabric deterioration can occur if stored while wet.

5

ODo NOT allow sharp or pointed objects to come into contact with the pad.

1Pull the seal stem (A) out of the valve and hold the seal (B).



Hold up the seat (D) and pass the new seal stem (A) through the hole in the seat.



GCut the seal stem (A) while leaving about 3mm remaining. This prevents interference with the cap. Do NOT cut down to the bulb (C).

Warranty

Disposal

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Accessories (Sold separately)

OPlease follow local regulations regarding waste disposal.

The following accessories are available for use with this product.

Pump Bag

Quickly and easily inflates air pads.

Joint System compatible

- U.L. Comfort System Air Pad / Alpine Pad *Connects with Air Pads and Alpine Pads, even of different lengths.
- U.L. Comfort System Pillow

*The following pad is not compatible. Instead use the pad's pillow strap. EXCELOFT Air Pad 180

Specifications

Materials: (Fabric) 30-denier polyester rip-stop [TPU laminate] (Insulation) EXCELOFT [polyester]

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

