

<u>Mesh Deck Bag 12</u>

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は 本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法を ご確認ください。なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまで お問い合わせください。本説明書は大切に保管してください。

■ 特長

カヤックやスタンドアップパドルボード(SUP)のデッキ、フィッシングカヤックのシートなどに取り付けられる 保水しにくいメッシュバッグです。デッキから外した際に持ち運びしやすいショルダーベルト付き。

■ 各部の名称



1

- ●本製品の四隅にあるバックル付きストラップをカヤックや SUPのDカンやバンジーコードに通します。
- ②バックルを留めて、余ったストラップを引きながらテンションを調節してください。





サイドストラップ使用方法

●サイドストラップ2本でビルジポンプなどを巻き、バックルを留めて固定します。

②バックルのレバーを上げてストラップを調整します。

⑥バックルのレバーを下げます。(ストラップが緩まないようにロックされます)

※サイドストラップは取り付ける物に合わせてバッグ本体の左右どちらにも取り付けできます。



■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

○ご使用後(特に海で使った際)は、真水で砂や汚れを洗い流してから陰干しをして、十分に乾燥させてください。 汚れがひどい場合はぬるま湯と洗剤で洗い、洗剤が残留しないよう充分にすすぎを行ってください。

■ 保管方法

○直射日光、紫外線、塩害を受けず高温多湿ではない、風通しの良い場所に保管してください。
 ○本製品を火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。
 ○使用しないときは必ずカヤックやスタンドアップパドルボードから外して保管してください。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、 お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につき ましては、弊社の裁量にて判断させていただきます。

- なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。
 - ○本製品の誤った使用方法によるもの
 ○間違ったお手入れ、保管方法、経年変化による素材劣化
 ○乱暴な取り扱いによるもの
 ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■仕様

品 番:#1127496 品 名:メッシュ デッキバッグ 12 主素材: ポリエステル

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

2

#式会社 モンペル 本社 〒550-0013 大阪市西区新町2-2-2 https://www.montbell.jp/ 商品についてのお問い合わせはカスタマー・サービスまで Tel. 06-6531-3544 フリーコール:0088-22-0031

mont-bell User's Manual Mesh Deck Bag 12 Mesh Deck Bag 12

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Attaches to the deck of a kayak or SUP, or a fishing kayak seat, and is made with durable mesh fabric that effectively drains water. Features a shoulder harness to provide easier portability when detached.

Components



Safety Warning! Please read carefully.

CAUTION: Under certain conditions, use of this product can result in injury or property damage.

- ODo NOT alter or modify this product in any way. May negatively affect the performance of the product.
- OPrior to use, check this product's condition and stop using immediately if you notice any deterioration from age/use, damage, or irregularities.
- ○Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.
- ○This product is NOT waterproof. Store valuables in a dry bag (sold separately).
- ODo NOT leave the product with other objects for extended periods while wet. May result in color transfer.

Prior to use, inspect this product for: Stop using immediately if you notice any irregularities.

- Deformation or damage in the buckles, D-rings and zippers
- Deformation, damage, or tearing in the fabric, shoulder harness, side straps and bungee cord

Directions

- Pass the buckled straps at the four corners of the product through the D-ring or bungee cord on your kayak or SUP.
- Snap the buckle and pull the strap to adjust the tension.
 1



Attached to a kayak Attached to a SUP Attached to a kayak seat

Using the side straps

• Wrap the two side straps around a bilge pump or other item and snap the buckles to secure.

2Raise the lever on the buckle to unlock and adjust the strap.

Observe the lever on the buckle to lock and secure the strap.
 * Side straps can be attached to either side of the product.



Care Improper care and storage can shorten the lifespan of this product.

OAfter use (especially after use in the ocean), wash away sand and dirt with fresh water and shade dry. In case of heavy soiling, wash with lukewarm water and a mild soap, then rinse thoroughly.

■ Storage

 \bigcirc Store in a well-ventilated, cool, dry place out of direct sunlight.

- \bigcirc To prevent deformation and damage, do NOT store near heat sources.
- OWhen not in use, detach from the kayak or SUP before storing.

Disposal

○Please follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#:#1127496

Material : Polyester

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

Name: Mesh Deck Bag 12

