

Ski Tracer

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書)といいます)は本 製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法を ご確認ください。

ただし、本説明書は本製品の基本的な使用方法を示すものです。安全な条件のもとで十分な練習を行い、正し い使用方法を習得してください。なお、ご不明な点等ございましたら、販売店もしくは(株) モンベル カスタマー・ サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 各部の名称

本製品は、深雪での転倒時に 外れたスキーを見失わないため のテープ状の目印です。

■安全上の注意

特長



危障 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

○登山は常に潜在的な危険をはらんでいます。たとえ用具の正しい選択、使用、お手入れ、保管を行なっていて も傷害や死亡事故などに至る危険性を完全に排除することは出来ません。個人の責任におい登山を行なっ てください。(株)モンベルでは本製品の誤った使用に起因する損害や傷害、死亡事故に対していかなる責任 をも負いません。

登告 場合により人が死亡または重傷を負う可能性が想定される内容です。 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品はスキー板を紛失しないための目印です。リーシュ(流れ止め)としての使用は絶対にしないでください。 ○靴や足などにインジケーターを固定しないでください。

○本製品が古くなったり、傷ついた場合は、速やかに使用を中止し、新しいものと交換してください。

○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分な強度が発揮できない恐れがあ ります。

○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直 ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。

▲ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分な強度が発揮できない恐れがあ ります。

■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。 異常が見られた場合は使用しないでください。

□インジケーターに焼け、切れ目、縫い目のほつれなどがないか □バックルに破損がないか

使用方法

ビンディングの開放時に本製品はス キー板と共に深雪に取り残され、スキー 板の位置を知らせてくれます。



○取り付け方法

A

Ø

0リング ❶Oリングを、ビン **2**ブーツにケースを



ディングに取り付 取り付けます。 けます。

先端のナスカンを かけます。

*ビンディングの形状によっては、Oリングを取り付けできない 場合があります。

○収納方法

インジケーターはきれいにつづら 折りにして、ケースに収納します。



■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

○ご使用後は、真水で汚れを洗い流してから陰干しをしてください。汚れがひどい場合はぬるま湯と洗剤で洗 い、洗剤が残留しないよう充分にすすぎを行ってください。

■ 保管方法

○直射日光の当たらない風诵しの良い場所を選んでください。

○本製品を火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきまし ては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの ○間違ったお手入れ、保管方法、経年変化による素材劣化 ○乱暴な取り扱いによるもの ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

品番:#1129135 品 名: スキートレーサー インジケーターの長さ:4m

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

#式会社 モンベル 本社 〒550-0013 大阪市西区新町2-2-2 Tel. 06-6531-3544 フリーコール: ⑧ 0088-22-0031 モンベルホームページ http://www.montbell.jp 商品についてのお問い合わせはカスタマー・サービスまで

1

44-3624-1904

mont.bell

User's Manual

Ski Tracer

Ski Tracer

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

Please understand this manual only explains how to use the product and does not go into detail regarding using the product safely or safe climbing practices. You are personally responsible for learning the proper techniques and safety procedures for using this equipment.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Components



Under certain conditions. **DANGER!** use of this product can result in major injury or death.

OMountaineering and rock climbing are inherently dangerous activities. Even if this product is used, cared for, and stored correctly, it will not completely eliminate the risk of major injury or death. You are responsible for your own actions and decisions. Montbell Co. LTD is not liable for damages or accidents resulting in injury or death resulting from improper usage.

WARNINGS!

Under certain conditions, use of this product can result in injury. death, or property damage.

This product was designed to provide a way to locate lost skis. Do NOT use as a leash.

- ODo NOT attach the indicator to ski boots or foot.
- Ostop use immediately if you notice the ski leash has become damaged or worn.
- OPlease follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

CAUTION!

Under certain conditions, use of this product can result in injury or property damage.

OPrior to use, check the product's condition and stop using immediately if you notice any damage or irregularities...

Prior to use, inspect this product for:

Burns, cuts, and frays on the Indicator Cracks in Buckle

Directions

If the ski's binding releases during use and becomes buried in deep snow, the indicator will follow the ski and provide a visible marker for where the ski is buried.



Attaching

O-ring O-ring Clip 07 EClip the indicator



1Attach the O-ring **2**Attach case to ski boot. to binding.

to the O-ring.

*Depending on the binding, it may not be possible to attach the O-ring.

Fold up the indicator in a back and forth pattern as illustrated below.



Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

 \bigcirc Wipe away stains and spills with a damp cloth. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If stored wet or soiled, mold can grow.

Storage

Store in a well ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light. To prevent deforming and damage, do NOT store near heat sources.

Disposal

OPlease follow local regulations regarding waste disposal.

Warrantv

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at its discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#: 1129135 Name: Ski Tracer Indicator length: 4m

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

> mont-bell Co.,Ltd. 2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN www.montbell.com

> > 2