■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

○本製品が汚れた際は柔らかいスポンジか布に水かぬるま湯を含ませて汚れをふき取ってください。汚れが ひどい時は中性洗剤を含ませて汚れをふき取ってください。

## ■ 保管方法

○保管場所は直射日光や雨の当たらない風通しの良い場所を選んでください。
 ○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

○ホースを折り曲げたまま保管しないでください。空気漏れの原因となります。

#### ■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

## ■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

また、本製品に使用されている樹脂やゴムは使用の有無にかかわらず徐々に劣化していきます。交換が必要な場合は販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの ○間違ったお手入れ、保管方法、経年変化による素材劣化

○乱暴な取り扱いによるもの ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

## ■ 仕様

- 品 番:1130596
- 品 名:マルチバルブ フロアポンプ
- 素材:シリンダー:スチール、ハンドル:樹脂
- 上限空気圧: 仏・米式バルブ:約11bar、160psi 英式バルブ:約7bar、100psi

# ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

4

**株式会社 モンペル**本社 〒550-0013 大阪市西区新町2-2-2 https://www.montbell.jp/ 商品についてのお問い合わせはカスタマー・サービスまで Tel. 06-6531-3544 フリーコール:0088-22-0031

44-4560-2108

# mont-bell <sub>取扱説明書</sub>

マルチバルブ フロアポンプ

#### Multi Valve Floor Pump

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます) は本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用 方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせ ください。本説明書は大切に保管してください。

#### ■ 特長

本製品は仏・米・英式バルブに対応したフロアポンプです。仏式と米式を兼用できるレバー式ヘッドにより、切り替えの手間を軽減しています。

## ■ 各部の名称



## ■ 安全上の注意 必ずお読みください

○本製品の改造や分解などは絶対にしないでください。性能が損なわれる恐れがあります。

- ○空気圧ゲージは圧力の目安を表示するものですので、必ず手でタイヤを押して再確認をしてください。空気 圧ゲージの何らかの故障によりタイヤに過剰な空気が充填されている恐れがあります。
- ○空気圧ゲージに衝撃を与えないでください。空気圧が正しく表示されない等、故障の原因となる恐れがあります。
  ○充填する空気圧はタイヤの指定空気圧に従ってください。
- ○意図した通りにタイヤに空気が入らない場合は、無理に空気を入れないでください。ポンプ内が高圧になり 破裂等の恐れがあります。
- ○操作する際は必ずフットステップを踏んだ状態でハンドルを両手で握り、最後まで押し下げてポンプ内の空 気を出し切ってください。空気圧によりハンドルが押し上げられ、怪我の原因となる恐れがあります。
- ○使用前に毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合に は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発 揮できない恐れがあります。
   1

#### ⚠️ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○本製品を使用する際は、必ず平らな場所で使用してください。

○アダプター収納ケースにアルコール類をかけないでください。細かなクラックが発生する恐れがあります。

■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。

ハンドルやフットステップに変形や亀裂がないかシリンダーとフットステップとの接合部分に緩みがないか

## ■ 使用方法

本製品を使用する前にお使いのバルブの種 類を確認してください。



#### ○ 仏式バルブの場合 ※本製品の口金は仏式、米式兼用です。



## ○ 米式バルブの場合

(図 E) ①レバーが倒れた状態でバルブを口金に奥 まで差し込みます(図 E)。

②バルブが曲がらないようにレバーを起こし、 しっかりと固定されていることを確認し、指定 の空気圧まで空気を入れてください(図F)。

③指を挟まないように注意しながらレバーを 倒し、バルブから口金を外して完了です (図 G)。

#### ○ 英式バルブの場合

①口金に英式用口金クリップを奥まで差し ひみレバーを起こします(図 H)。

英式口金クリップ -

袋ナッ

3

(図G)

- ②英式用口金クリップでバルブの袋ナット (図 I)。
- ③しっかりと固定されていることを確認し、指 定の空気圧まで空気を入れてください。
- (図 J) ④逆の手順で英式用口金クリップをバル ブから取り外して完了です(図 J)。

#### ○ 空気圧の調節 -

空気圧調節ボタンを使用して、空気圧の調節をすることが出来 ます。口金にバルブを差し込み、レバーを起こした状態で空気圧 調節ボタンを押すと、少しずつ空気圧が下がります

# ○ 自転車のタイヤ以外のものに空気を入れる場合 —

ハンドルの中にアダプターが内蔵されています。必要に合わせてお使いください。 ※片側のアダプター収納ケース内に収納されています。





# 2

1

空気圧

調節ボタン

(図 F)



Improper care and storage can shorten the lifespan of this product. To extend the lifespan of this product, please follow the recommendations below.

Wash away stains and soiling with cold or lukewarm water. When stained and soiled heavily, use a sponge with a mild soap and wash thoroughly.

#### Storage

 $\bigcirc$  Store in a well ventilated, cool, dry place away from direct sunlight and rain.

○ To prevent deformation and damage, do NOT store near heat sources.

 $\bigcirc$  Do NOT store with the hose bent. May damage the hose and allow air to leak.

## Disposal

OPlease follow local regulations regarding waste disposal.

# Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

# Specifications

Style#	1130596
Name	Multi Valve Floor Pump
Materials	Pump : Steel Handle : Plastic resin
Maximum Air Pressure	Presta, Schrader valve: 11 bar, 160 psi Dunlop valve: 7 bar, 100 psi

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

44-456

# **mont-bell** <sup>User's Manual</sup> Multi Valve Floor Pump

#### Multi Valve Floor Pump

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

## Description

A multi-valve bicycle floor pump, compatible with Presta, Schrader and Dunlop valves. The lever-type pump head works with Presta and Schrader, saving time and energy.

## Components



## Safety Warning! Please read carefully.

**DANGER!** 

Under certain conditions, use of this product can result in major injury or death.

- ODo NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- OThe pressure gauge is only a guide when inflating. Always check the tire's air pressure with your hands. A broken pressure gauge may result in excessive air in the tire's inner tube. Always check the tire's air pressure with your hands. A broken pressure gauge may result in excessive air in the tire's inner tube.
- ODo NOT drop or damage the pressure gauge with strong shocks. May impair functionality and break the product.
- OMake sure to fill the tire's inner tube with the specified amount of air pressure.
- ODo NOT continue inflating the tire's inner tube when air isn't flowing properly. May cause the pump to burst or break.
- OWhen using the pump, hold the handle with both hands while stepping on the base, and push down all the way to pump out all the air in the pump. If the air remains in the pump, the handle may be pushed back up by air pressure, which may cause injury.

OPrior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.

OPlease follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

**CAUTION:** Under certain conditions, use of this product can result in injury or property damage.

- OAlways use this product on flat ground.
- ○Do NOT apply alcohol based products to the adapter storage case. May result in small cracks forming on the case.

# Prior to use, inspect this product for:

Cracks or deformation to the handle and base.Looseness in the joint between the cylinder and base.

# Directions



### $\bigcirc$ Schrader valve

- ①With the lever flipped down, push the valve all the way into the port (Fig. E).
- ②Flip up the lever until it is locked in place while being careful not to bend the valve, then inflate the tire to the specified air pressure (Fig. F).
- <sup>(3)</sup>Flip down the lever while being careful not to pinch your fingers, then remove from the port (Fig. G).



Air pressure

adjustment button

#### ◯ Dunlop valve

- ①Insert the Dunlop head adapter into the port then flip up the lever (Fig H.)
  - Dunlop head adapte

(Fig. H)

(Fig. I)

(Fig. J)

Valve's

nut

- ②Clip the Dunlop head adapter to the top nut (Fig. I).
- ③Check that the adapter is firmly in place, then inflate the tire to the specified air pressure.
- ④Disconnect the Dunlop head adapter from the valve (Fig. J)

#### ○ Adjusting air pressure

Use the air pressure adjustment button to optimize the tire pressure. Release small amounts of air by pushing the button while the valve is inserted in the port.

#### $\bigcirc$ When pumping up objects other than bike tires

Adapters are housed inside the handle. Use when necessary. \*Opposite end of the handle is open space.

Press here Underside of the handle





Adapters

·