mont.bell

取扱説明書



Rechargeable Power Battery

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本 製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法を ご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせくだ さい。本説明書は大切に保管してください。

■ 特長

本製品は【マルチパワーヘッドランプ、マルチパワーヘッドランプ ネイチャーガイド】専用のバッテリーです。 ※本製品単体では使用できません。使用の際は本製品の他に別売の 【マルチパワーヘッドランプ】 か 【マル チパワーヘッドランプ ネイチャーガイド】が必要です。対応していない製品に使用しないでください。



|安全上の注意 |必ずお読みください]

危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- ○本製品を使用中に異常を感じた場合は速やかに使用を中止して、販売店もしくは(株) モンベル カスタマー・ サービスまでお問い合わせください。
- ○充電は付属のUSBケーブルを使用し、USB出力ACアダプターや給電可能なパソコンなどのUSBポートから 行ってください。他の電源を使用すると発熱や発火の原因となる場合があります。
- ○定格電圧・電流を超えて充電しないでください。また、所定の充電時間を超えても充電が終了しない場合や、 異常な発熱を感じた場合は、直ちに充電を中止してください。発火や破裂の原因となる場合があります。
- ○火の中に投入したり、加熱したりしないでください。本体に引火した場合、爆発や火災を招く危険性があります。
- ○高温になる場所(暖房器具の近くや炎天下の車内など)に長時間放置しないでください。変形、発火、破裂、 火災、故障の原因となる場合があります。
- ○水中に浸したり、水がかかる状況では使用しないでください。また、湯気や湿気の多い場所には置かないでください。発熱、感電、故障などの原因になります。
- ○本製品のラベルを取り外すなど、分解や改造をしないでください。発火、発熱、破裂の原因となります。

○異物(金属製品やアクセサリー)などがUSB-Cポートに触れたり、内部に入らないようにしてください。機器の ショートを招く危険性があり、感電や故障の原因となる場合があります。

登書告 場合により人が死亡または重傷を負う可能性が想定される内容です。
 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- ○異臭、発熱、変色、変形などの異常が見られた場合は直ちに使用を中止してください。故障、破裂、発火、 火災などの原因となる場合があります。
- ○重い物の下に置いたり、落下させて衝撃を与えないでください。発熱、発火、破裂の原因となる場合があります。
 ○寝袋や布団などに覆われた状態で使用しないでください。発熱や火災の原因となります。
- ○濡れた手で充電しないでください。発熱や発火、感電などの恐れがあります。
- ○ケーブルを踏みつけたり痛めたりしないでください。感電、発熱、火災の原因となる場合があります。
- ○電子レンジをはじめとする加熱調理機器や高圧容器には決して入れないでください。爆発や火災を招く危険 性があります。
- ○乳幼児の手の届かないところで使用・保管してくだい。誤飲や感電など、思わぬアクシデントの原因となる場合があります。

▲ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- ○本製品は対応製品専用のバッテリーです、対応製品以外に使用しないでください。
- ○充電時以外は、USBケーブルを抜いてください。発熱、発火、感電の原因となる場合があります。
- ○-20℃~ 45℃の範囲外では使用しないでください。発熱、発火、破裂の原因となる場合があります。また、この温度範囲内であっても、低温化では本来の性能は発揮できません。
- ○0℃~ 45℃の範囲外では充電しないでください。発熱、発火、破裂の原因となる場合があります。
- ○高温状態での充電、放電、保管は充電池の劣化を早めます。
- ○磁気やホコリの多い場所では使用しないでください。故障の原因となります。
- ○使用前は必ず点検してください。老朽化が認められる場合や損傷が認められたり、疑わしい場合には直ちに本 製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。

■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。 異常が見られた場合は使用しないでください。

□本体に破損がないか

□ケーブルに破損がないか



○本製品への充電



●付属のUSBケーブルを本体 とお持ちの給電が可能な USBポートに接続します。



❷接続すると自動的に充電を開始して、 バッテリーインジケーターが赤色に点 灯します。満充電までの時間は約2.5 時間です。



③充電が終わるとバッテリーインジケーターが消灯します。 ケーブルを抜いてください。

■ お手入れ方法 ・ 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

○汚れたときは、良く絞った柔らかい布でふいてください。 硬い布でふいたり、強くこすると、表面に傷が付く 恐れがあります。また、ガソリン、シンナー、ベンジン等の溶剤や漂白剤などは使用しないでください。、



- ○雨露、粉塵、直射日光、紫外線、塩害、高温、多湿を受けることがない、風通しの良い乾燥した場所(0~40 度)で保管してください。
- ○長期間(半年以上)使用しない場合は、75~50%程度充電した状態で保管してください。自然放電が進ん だ状態で長期間放置すると、電圧が低下し、使用できなくなることがあります。また、満充電での長期間の 保管はバッテリーの寿命を縮める場合がありますのでご注意ください。
- ○火気の近くや自動車内などの高温になる場所や極端に低温になる場所に保管しないでください。変形、発 火、破裂、火災、故障などの原因となる場合があります。
- ○子供の手の届かないところに保管してください。、

■ 廃棄方法

○ご不要になった使用済み充電池は放置したり、一般ゴミと一緒に捨てないでください。 ○内蔵しているリチウムイオン電池はリサイクルできます。ご不要になった本製品は分解せずにモン ベルストアにお持ち込みいただくか、下記カスタマー・サービスまでお客様負担でご送付ください。、

🔳 アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきまし ては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- ○本製品の誤った使用方法によるもの ○間違ったお手入れ、保管方法、経年変化による素材劣化
- ○乱暴な取り扱いによるもの
- ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

□入力:DC5V、0.8A □本体充雷時間:約2.5時間

品 番:1134205 品 名: リチャージャブル パワーバッテリー 内 蔵 電 池: 3.7Vリチウムイオン電池 / 電池容量: 1250mAh 使用可能温度:-20℃~45℃ 充電可能温度:0℃~45℃ 品: USBケーブル(Type-C) 付 属



本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 モンベル本社 〒550-0013 大阪市西区新町2-2-2 モンベルホームページ https://www.montbell.jp/ 商品についてのお問い合わせはカスタマー・サービスまで Tel. 06-6531-3544 フリーコール:0088-22-0031

mont.bell

User's Manual

Rechargeable Power Battery Rechargeable Power Battery

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Designed for use with the Multi Power Head Lamp and Multi Power Head Lamp Nature Guide. This battery CANNOT be used by itself or with incompatible products. It must be used with the Multi Power Head Lamp or Multi Power Head Lamp Nature Guide (sold separately).

Components



Safety Warnings! Please read carefully.

CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- Olf you notice any irregularities or an unusual burnt smell, stop using immediately. Please contact Montbell Customer Service or the store of original purchase.
- ○Use a USB AC adapter, laptop, or computer for charging. Do NOT charge using other devices as it may cause overheating and fire.
- Obo NOT charge beyond the specified voltage and current. If the battery is not completely charged even when plugged in for longer than the designated charging time, or if there is excessive heat, stop charging immediately. May result in overheating or rupture.
- ODo NOT place in fire or apply heat. There are risks of explosion and fire if the main body ignites.
- ○Do NOT place this product in high temperatures (near heaters or inside a car under the sun) for an extended period of time. May cause deformation, ignition, rupture, fire or malfunctions.
- ODo NOT use this product underwater or if exposed to water. Do NOT place in areas with steam or high humidity. May result in overheating, electrocution or malfunctions.
- ODo NOT disassemble or modify this product, such as removing the label. May result in ignition, overheating or rupture.

ODo NOT allow foreign objects (metal objects or other items) to touch or enter the USB Type-C port. There is a risk of short-circuiting the product, which may result in electrocution or malfunctions.

WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

- Olf you notice any abnormalities such as unusual odors, overheating, discoloration, or deformation, stop using immediately. May cause malfunctions, rupture, ignition or fire.
- Obo NOT drop, apply strong shocks, or place heavy items on this product. May cause overheating, ignition, or rupture.
- ○Do NOT use this product while it is covered by cloth items such as a sleeping bag or blanket. May cause overheating or fire.
- Olnserting USB cables with wet hands can cause shorts resulting in electrocution, overheating or fire.
- ODo NOT step on or damage the USB cable. May cause electrocution, overheating or fire.
- ODo NOT put the product inside a microwave or pressure cooker. May cause explosion or fire.
- OKeep the product out of the reach of toddlers and infants. May result in electrocution, accidental ingestion or other accidents.

CAUTION! Under certain conditions, use of this product can resul tin injury or property damage.

- ○This product is a battery dedicated for compatible products only. Do NOT use it with non-compatible products.
- OUnplug the USB cable when not charging. May cause overheating, ignition or electrocution.
- ○Do NOT use outside the temperature range of -20°C to 45°C. May cause overheating, ignition or rupture. Even if within this temperature range, lower temperatures may limit performance.
- ○Do NOT charge outside the temperature range of 0°C to 45°C. May cause overheating, ignition or rupture.
- OBattery life expectancy decreases when charged, discharged, and stored in high temperature conditions.
- ODo NOT use this product near magnetic or dusty areas. May cause malfunctions.
- OPrior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.

OPlease follow recommended care and storage instructions.

Prior to use, inspect this product for: Stop using immediately if you notice any irregularities

- \Box Damage to the main body
- Damage to the USB

Directions

\bigcirc Charging this product



• Insert the included USB cable into the battery and a USB port that can supply electricity.



The battery begins charging automatically when connected, and the battery indicator lights up red. It will take about 2.5 hours to charge fully.



When charging is complete, the battery indicator turns off. Unplug the USB cable.



Improper care and storage will shorten the lifespan of this product. Please review the following instructions for care and storage.

Owhen dirty, wipe off with a soft, damp cloth. Wiping with a hard cloth or scrubbing the surface may result in scratches. Do NOT use bleach or solvents such as gasoline, paint thinner or benzene.

Storage

- Ostore in a well-ventilated dry place between 0°C and 40°C. Keep away from moisture, dust, direct sunlight, ultraviolet light and salty air.
- ○When storing this product for a long period (more than six months), store it at around 50–75% battery charge. If left unused for a prolonged period with a significantly drained battery, it may become inoperable due to voltage drop. Additionally, storing the battery for a long time with a full charge may reduce battery life.
- Obo NOT store in places subject to high temperatures such as near open flames or inside a car, or in extremely cold locations. May cause deformation, ignition, rupture, fire, or malfunctions.

OKeep out of the reach of children.

Disposal

Ob NOT dispose of used batteries with normal waste. Please follow local regulations.
The internal lithium-ion battery can be recycled. To recycle, do NOT dissemble the product. Please take it to a Montbell store or ship the product to Montbell Customer Service (customers are responsible for all shipping charges). *This service is only available in Japan.



Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Input : DC5V 0.8A

Charging time : approx. 2.5 hours.

Style#	: 1134205
Name	: Rechargeable Power Battery
Internal battery	: 3.7V lithium ion battery / capacity: 1250mAh
Usable temperature range	: -20℃~45℃
Chargeable temperature range	: 0℃~45℃
Included	: USB cable(Type-C)

Others

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd. 2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN https://www.montbell.com/ 8