間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。 ■ お手入れ方法

○本製品が汚れた場合は中性洗剤や水を含ませた布で拭き取り乾燥させてください。シンナーやアルコールは 使用しないでください。変形、故障などの原因となる場合があります。

■ 保管方法

○雨露、粉塵、直射日光、紫外線、塩害を受けず高温、多湿ではない、風通しの良い乾燥した場所(0~40度)で 保管してください。

○長期間(半年以上)使用しない場合は、41~70%程度充電した状態で保管してください。バッテリーは使用し なくても自然に放電する自然放電が進んだ状態で長期間放置すると、電圧が低下し、使用できなくなることが あります。また、満充電での長期間の保管はバッテリーの寿命を縮める場合がありますのでご注意ください。

○火気の近くや自動車内などの高温になる場所や極端に低温になる場所に保管しないでください。バッテリ 一性能の劣化、変形、発火、破裂、火災、故障などの原因となる場合があります。

○子どもの手の届かないところに保管してください。

■ 廃棄方法

○ご不要になった使用済み充電池は放置したり、一般ゴミと一緒に捨てないでください。

○内蔵しているリチウムイオン電池はリサイクルできます。ご不要になった本製品は分解せずにモン ベルストアにお持ち込みいただくか、下記カスタマーサービスまでお客様負担でご送付ください。



お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきまし ては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの ○間違ったお手入れ、保管方法、経年変化による素材劣化

○乱暴な取り扱いによるもの ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

	明る #1134229	らさ(Im) #1134230	照射時間	■明るさルーメンとは光源から発せられる光の総量を 表した光学単位で、方向や距離に関係なく				
色温度	4500K	3500K	(h)	光源の本来持っている性能を示しています。 ■照射時間 初期照度に対し、10%の照度に減衰する				
LOW	25	20	120	■ ※ 初時間初期照反に対し、10%の照反に減る までの時間を示しています。				
MID	310	270	12					
HIGH	600	500	6					
品 番: 1134229 1134230 品 名: パワーバンク ランタン パワーバンク ランタン ウォーム 内 蔵 電 池: リチウムイオン電池6400mAh U S B 出 力: DC5.0V/最大2.0A U S B 入 力: DC5.0V/最大2.0A(満充電まで4~4.5時間) 防 水 規 格: IPX4(あらゆる方向からの飛沫による有害な影響がない) ■ その他								

ていし

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

##ご会社 モンベル 本社 〒550-0013 大阪市西区新町2-2-2 https://www.montbell.ip/ 商品についてのお問い合わせはカスタマー・サービスまで Tel.06-6531-3544 フリーコール:0088-22-0031 4 44-5528-2310





Power Bank Lantern

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は 本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方 法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせ ください。本説明書は大切に保管してください。

■ 特長

 $\langle \Sigma \rangle$

Li-ion

本製品は繰り返し使えるリチウムイオン電池を内蔵した、USB 充電式 LED ランタンです。携行時はシェードを 収納できるコンパクト設計。テントを離れるときの目印としても役立つ点滅(サイトマーカー)モードを備えてい ます。また、テントなどに吊り下げられるフックを装備しています。

内蔵バッテリーに蓄えた電力はランタンとして使用するだけでなく、お持ちの機器へ出力することができます。

■ 各部の名称



■ 安全上の注意 必ずお読みください

危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- ○本製品を使用中に異常を感じた場合は速やかに使用を中止して、販売店もしくは(株) モンベル カスタマー・サー ビスまでお問い合わせください。
- ○充電は付属のUSBケーブルを使用し、USB出力ACアダプターや給電可能なパソコン・モバイルバッテリーなどの USBポートから行ってください。他の電源を使用すると発熱や発火の原因となる場合があります。
- ○定格電圧・電流を超えて充電しないでください。また、所定の充電時間を超えても充電が終了しない場合や、異常 な発熱を感じた場合は、直ちに充電を中止してください。発火や破裂の原因となる場合があります。

巻客 場合により人が死亡または軍傷を見つり地にはいぶたこういです。 年 年傷または物的損害が発生する頻度が高いことが想定される内容です。

○異臭、発熱、変色、変形などの異常が見られた場合は直ちに使用を中止してください。故障、破裂、発火、火災などの 原因となる場合があります。

- ○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、発熱、発火、破裂の原因となる場合があります。
- ○重い物の下に置いたり、落下させて衝撃を与えないでください。発熱、発火、破裂の原因となる場合があります。
- ○寝袋や布団などに覆われた状態で使用しないでください。発熱や火災の原因となります。
- ○USBポートのフタは確実に取り付けてください。取り付けが不充分だと、スイッチが入らない、あるいは本体内部に水 が入りショートや絶縁不良による発熱・感電・故障につながる恐れがあります。
- ○濡れた手で充電しないでください。発熱や発火、感雷などの恐れがあります。
- ○ケーブルを踏みつけたり痛めたりしないでください。感電、発熱、火災の原因となる場合があります。
- ○電子レンジをはじめとする加熱調理機器や高圧容器には入れないでください。爆発や火災を招く危険性があります。
- ○乳幼児の手の届かないところで使用・保管してくだい。小さなパーツの誤飲や感電など、思わぬアクシデントの原因 となる場合があります。
- ○本商品は防滴仕様 (IPX4) ですが防水機能はありません。本体内部に水が入るとショートや絶縁不良による発 熱・感電・故障につながる恐れがあります。
- ○使用後は必ず消灯してください。発熱・破損などの恐れがあります。

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- ○目に直接光を当てないでください。目に傷害を負う恐れがあります。
- ○お使いの電子機器が、USBケーブルを差込めない仕様の場合は、本製品から充電できません。
- ○本製品は全てのUSB充電対応機器への充電を保証するものではありません。電子機器の仕様によっては充電で きないことがあります。詳しくはご使用の電子機器の取扱説明書をご覧ください。
- ○接続する機器によっては、登録内容のメモリーが突然消失する可能性があります(接続する機器の取扱説明書をご 覧ください)。接続する機器の登録内容は必ずバックアップを取ってからご使用ください。本製品の使用に際して、 消失した登録内容などの保証は一切いたしませんので、あらかじめご了承ください。
- ○使用時以外は、USBケーブルを抜いてください。発熱や発火、感電の原因となる場合があります。
- ○内蔵バッテリーは交換できません。
- 0℃~ 40℃の範囲外では使用しないでください。発熱、破裂の原因となる場合があります。
- ○高温状態での充電、放電、保管は充電池の劣化を早めます。
- ○磁気やホコリの多い場所では使用しないでください。故障の原因となります。
- ○使用前は必ず点検してください。老朽化が認められる場合や損傷が認められたり、疑わしい場合には直ちに本製品 の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。

■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。

□仕様通り点灯するか □本体の変形がないか □充電されているか □ケーブル類に破損はないか

■ 使用方法

○ 本製品への充電(入力) -

本製品の内蔵バッテリーにはUSB出力ACアダプターやモバイルバッテリーから充電を行うことができます。



●フタを開け、付属のケーブルの USB Type-C端子を本体の USB Type-Cポートに挿入し ます。



❷接続すると自動的に充電を開始 し、バッテリーインジケーターが点 滅します。残量0%から満充電ま での時間は4~4.5時間です。 2



インジケーターが消灯しま す。ケーブルを抜いてフタ を閉めてください。

○ 充電・バッテリー残量の確認方法

充電状態(残量)は本体側面のバッテリーインジケーターで確認できます。

インジケーターはスイッチを1回押すと点灯します。



○ 点灯モードの切り替え方法

※本製品はバックパックやかばんの中で不意にスイッチが点灯することのない、ダブルクリック点灯 式です。1回スイッチを押すとインジケーターが3秒間光ります。インジケーターが光っているうち にもう1回スイッチを押すと点灯します。

※シェードを引き上げて光を拡散することができます。

●スイッチをダブルクリックする(3秒間に2回押す)とLEDが点灯します。(━━━)

②スイッチを押すごとに、図のように点灯モードが切り替わります。(→→→)

❸点灯モードに関わらず3秒以上同じモードで点灯を

続けると、次にボタンを押した際に消灯します。 (-----)

※スイッチを入れても点灯しない場合は下記をお 確かめください。

・電池が消耗している → 充電する

・スイッチをダブルクリック(連続して2回押す)する

能性があるため、ケーブルを交換する

・充雷時にバッテリーインジケーターが点灯しない (充電できない)→ ケーブルが断線している可



点滅(サイトマーカー)モード

テントサイトなどで目印になるよう、ゆっくり点滅するモードを搭載しています。

○ フックについて ―

底部のフックを引き起こすと、テントのループなどに吊り下げて 使用できます。



○ モバイル機器への充電(出力)

本製品の内蔵バッテリーからスマートフォンやリチャージャブルヘッドランプ等のお持ちのモバイル機器へ 出力を行うことができます(※すべてのUSB充電対応機器への充電を保証するものではありません)。内蔵 バッテリーから充電を行った場合、本製品の照射時間は短くなります。

USBポーI	ŀ
USB端子────」	

●フタを開け、充電したいデバ イスのUSB端子を本体の USBポートに挿入します。



)	
U,	÷.	Ł	

②接続すると自動的に出力を開始し、バッ ❸出力が終わるとバッテリー テリーインジケーターが点滅します。 ※機器によっては自動で出力されない場合がありま す。その際は1回スイッチを押すと開始されます。

インジケーターが消灯しま す。ケーブルを抜いてフタ を閉めてください。

Care

○To clean the lantern use a damp cloth to remove dirt and dust, using a neutral detergent when necessary. Do not use alcohol or paint thinners as they can damage the unit.

Storage

○Store in a well ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.

- Owhen storing headlamp for a long period (over 6 months), maintain battery charge of 75%. Overtime, the battery self-discharges and may lose its ability to recharge. In addition, storing fully charged shortens the battery's life expectancy.
- ODo not store in a car or places subject to temperature extremes.
- OKeep out of the reach of children.

Disposal

ODo NOT dispose of used batteries with normal waste. Please follow local regulations.

○The built-in lithium-ion battery can be recycled. To recycle, do NOT dissemble the product, Please take it to a Montbell store or ship the product to Montbell Customer Service (customers are responsible for all shipping charges). *This service is only available in Japan.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

色温度	Lum #1134229 4500K	ens(Im) #1134230 3500K	Burn Time (h)	Lumens Lumens are a unit that measures the total amount of light emitted from a light source in all directions.				
LOW	25	20	120	Burn Time Time it takes for the light source to dim 10% of initial brightness.				
MID	310	270	12	10% of initial brightness.				
HIGH	600	500	6					
Style# 1134229 1134230 Material ABS Plastic Name Power Bank Lantern Power Bank Lantern Warm Included USB cable Battery Lithium ion Battery 6400mAh USB OUTPUT DC5.0V/2.0A Included USB cable Water-resistance IPX4(Water splashing against the enclosure from any direction shall have no harmful effect.) Material ABS Plastic								

Others

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.



44-5528-2310

mont-bell

User's Manual

Power Bank Lantern

Power Bank Lantern

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This powerful LED lantern is compact by utilizing a sliding shade and is powered by rechargeable lithium-ion battery. This lantern also has a tent locator (flash) mode which is useful for a variety of situations, such as beacon for your campsite at night. Hang the lantern in your tent or campsite using the hanging hook on the battery cover. Includes USB cable.

Use it as a lantern or share power to other USB chargeable devices.

Components



Safety Warnings! Please read carefully.

CAUTION: Under certain conditions, use of this product can result in injury or property damage.

Owhen you notice any irregularities or an unusual burnt smell, stop using immediately. Please contact Montbell Customer Service or the store of original purchase.

- OUse USB AC adapter, laptop, and/or computer for charging. Do NOT charge using other devices as it may cause overheating and fire.
- ODo NOT excessively charge over the rated voltage/current. If the product doesn't get fully charged in the prescribed time or starts to overheat, stop charging immediately. May lead to fire or rupturing.

WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

Owhen you notice any irregularities or an unusual smell, stop using immediately. May cause damage, rupture, overheating or fire.

- OModifying or altering the product may damage the functions or cause overheating or rupturing.
- Obo NOT place heavy items, drop or apply strong shocks. May cause overheating, fire or explosion.
- Obo NOT use the product while it is covered by cloth (i.e., blanket or sleeping bag). May cause overheating which can lead to fire.
- OMake sure to securely close the USB port cap. Lantern may not turn on and water entry can cause shorts resulting in overheating, electrocution or damage.
- Ocharging batteries with wet hands can cause shorts resulting in electrocution, overheating or fire.
- Obo NOT step on or damage the USB Cable. May cause electrocution, overheating or fire.
- ODo NOT put the product inside a microwave or pressure cooker. May cause explosion or fire. OKeep out of the reach of children.
- Obo not use underwater. Although this is IPX4 rated, it is not waterproof. Water entry can cause shorts resulting in overheating, electrocution and damage.
- To prevent damage or overheating the unit, turn off after use.

CAUTIONI Under certain conditions, use of this product can result in injury or property damage.

- ONever shine light directly at a person's eyes.
- Olf your electronic device does not have a USB port, you will NOT be able to charge it with this product.
- OThere is NO guarantee that this product will be able to charge all devices that can be charged with a USB cable. For further information, please see the user's manual for your device.
- The possibility exists that when connecting this product to your electronic device, the data on the device's memory can be lost permanently. It is strongly recommended that you back up the data on vour device. Montbell Co., Ltd, is not responsible for the loss of data or damage to electronic devices as a result of using the devices with this product
- Ounplug the USB cable when not in use. May cause shorts resulting in electrocution, overheating or fire. OBatteries are NOT replaceable.
- \bigcirc Use this product only in temperature ranges of 0°C 40°C. Use outside of this temperature range can cause overheating or rupturing.
- OBattery life expectancy decreases when charged, discharged, and stored in high temperature conditions.
- ODo NOT use this product near magnetic or dusty areas. May damage the product.
- OPrior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- OPlease follow recommended care and storage instructions.

Prior to use, inspect this product for:

Lantern is in good working order. damage or irregularities. Fully-charged batteries Damage to cable

Directions

Recharging battery -

This lantern can be charged from USB AC adapter or mobile battery.



1Open the USB port cap and connect the USB Type-C cable end with the USB Type-C port. Attach the USB cable end to an available USB port.



2 Starts charging automatically and the battery indicator turns on. Takes 4-4.5 hour to fully charge.



3When the battery is fully charged, the indicator turns off. Remove the cable and close the USB port cap.

Battery charge/Remaining battery power

The following status can be checked on the battery indicator. click the power button once to check.

₩00 000 Battery Charging Charging Charging Fully charge $(41 \sim 70\%)$ (71~99%) charged $(0 \sim 40\%)$ Off On ₩-00 000 OO In-use Flash 100~60% $59 \sim 30\%$ $29 \sim 10\%$ 9~1% 0% mode

\bigcirc \bigcirc Switching lighting modes

"This product is designed to prevent accidental turn on in your backpack. Double click feature requires 2 consecutive clicks to turn on. 1 click turns on the battery indicator for 3 seconds and click once more to turn on the light.

*Can be diffused the light by pulling up the shade.

• Click the power button twice within three seconds to turn on the lantern.

3 After three seconds in any lighting mode, clicking

the power button once will turn the light off. (-----)

**If power doesn't turn on, troubleshoot the following:

•No battery power \rightarrow Charge

·Click the power button twice consecutively.

·When charging, the battery indicator doesn't light→USB cable may be damaged. Try using an alternative cable.



Flash mode(Tent locator)mode

Slow strobe mode to alert others of your location

 \bigcirc Using the hanging hook –

By lifting up the hanging hook on the battery cap, this lantern can be hung in various places, such as your campsite or inside your tent.



Charging an electronic device

This product can share power to your USB chargeable devices, such as smart phone and rechargeable headlamp. (*May not share power depending on products.) After charging other devices with this product, lighting time will be shorter.



cable to the device.





Open the USB port cap **2**Starts charging automatically and **3**When the device is fully and connect the USB the battery indicator turns on. *May not start charging automatically. In this case, click the power button once.

charged, the indicator turns off. Remove the cable and close the USB port cap.