■ 保管方法

○本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い場所に保管してください。付属の収納袋は、携行性を重視しているため、きつめにたたまないと入らないので使用を避けてください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの
 ○間違ったお手入れ、保管方法、経年変化による素材劣化
 ○乱暴な取り扱いによるもの
 ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。



■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。



44-2826-1903

株式会社 モンベル 本 社 〒550-0013 大阪市西区新町 2-2-2 Tel. 06-6531-3544 フリーコール: ④ 0088-22-0031 商品についてのお問い合わせはカスタマー・サービスまで モンベルホームページ http://www.montbell.jp 4.



■ 安全上の注意 必ずお読みください

登告場合により人が死亡または重傷を負う可能性が想定される内容です。
 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

本製品内や本製品近くでは、絶対に火気を使用しないでください。火災や酸素欠乏症、 一酸化炭素中毒等の恐れがあります。

○ベンチレーションや出入り口などの換気パネルを常に開け、換気には充分ご注意ください。

mont.bell

取扱説明書



Camouflage Watch Tencho

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は 本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方 法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせく ださい。本説明書は大切に保管してください。

■ 特長

本製品はテントとしてもポンチョとしても使用できる、カモフラージュ柄の軽量簡易シェルターです。 バードウォッチングや野外観察に最適です。

■ 各部の名称

/ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○本体生地は熱に弱い性質を持った合成繊維です。たき火やストーブなどを近づけないようご注意ください。
 ○テントとして使用の際には必ずペグで固定してください。砂地や雪上では状況に応じたペグ等が別途必要です。
 ○本製品の設営地はできるだけ平坦地を選び、危険のない場所を選んでください。

○ナイロンは太陽光線の紫外線により劣化しますので、数ヶ月張ったまま放置しますと著しく寿命が縮まります。 また、硫黄ガスが発生する温泉地等でも寿命を縮めますのでご注意ください。

○付属のペグには鋭利な部分がありますので、取扱いにはご注意ください。

■ 使用方法

※本製品を簡易シェルターとしてご使用いただく際には最大長120cm以上の別売のトレッキングポール (もしくはそれに変わる支柱)があらかじめ必要となります。また、状況によっては頂点部のループにロープ などを通して吊り下げるように使用することが可能です。

- ●収納袋に入った構成部品を全て取り出し、本製品の出入口が閉じていることを確認し、表側を上にして広げます。 風の強い所では、この時本製品が吹き飛ばされないように十分注意してください。

ΣB

ΣA

ペグ

留め用

ループ

ペグ

図 C

- ❷裾の三隅に設けられたペグ留め用ループにペグを通して本製品を固定します。付属のペグが使用できないようなガレ場や砂地では別売のメッシュアンカーや他のペグを用いて固定してください。
- ※ペグは通常(図A)のように通しますが、ペグ留め用ループが 長めに設けてあるため、途中に結び目を作ることで本体の高 さ(地面と裾とのすき間)を調整することができます(図B)。 ペグ留め用ループを取り付けてあるテープループに直接ペグ を打つことで本体を最も低くすることができます(図C)。
- ❸本製品の出入口のジッパーを開放して内側に入ります。この時、支柱となる別売のトレッキングポールを 忘れずに携行してください。次に、内側からジッパーを閉じてください。

●支柱の先端を本製品の頂点部分に当てて本製品を中から押し上げます。支柱が地面に対して垂直の 角度で自立するように注意しながら適度なテンションが掛かるように長さを調整してください。

トレッキングポールを使用される場合は、頂点部を保護するために必ずグリップ側を上にしてください。 ュまた、先端が鋭利なものを利用される際はキャップを付けるなどして、本製品の生地を保護してください。

●強風時には頂点ループにお持ちのロープや細引きなどを通して上から押さえつけるように固定すると耐風性が向上します。また、頂点ループを利用して、本製品を樹木の枝などから吊り下げれば支柱を使用せずに設営することができます。

○ 着用方法(ポンチョとして) –

※適用サイズは身長150cm以上です。バックパックを背負った状態でも着用できます。

●本製品をかぶり、出入口部分のジッパーを閉じます。 次に、前側の裾コーナー内側に設けた内側ループを 袖口のトグルに内側からセットし、裾が地面に擦れる のを防ぎます。



裾をテンチョの内側に折り返す ように取り付けてください。

❷左右の袖口から手を通します。





■ お手入れ方法 「関違ったお手入れ方法や保管方法は本製品の寿命を縮めます。 使用後や保管時は以下の点を参考にしてください。

- ○使用後は、泥汚れなどを水洗いし、陰干しして乾燥後に収納してください。汚れたまま、あるいは濡れたまま 長時間放置するとカビが発生する可能性があり、また生地も劣化しやすくなります。
- ○長期の使用により、撥水性能(水を弾く力)が低下した場合は別売のS.R.スプレー等の撥水スプレーをご 使用ください。
- ○ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷めるおそれがあります。

○ジッパーの動きが固くなりましたら、別売のスムースライダー™やローソクのロウを塗ると回復します。

○ペグは汚れを濡れタオルで拭き取った後、機械油を薄く塗ってください。

2

Storage

OWhen storing for an extended period of time, store loosely in a well ventilated, cool, dry place out of direct sunlight. The product is not designed to be stored long term in the stuff sack that should only be used for transporting the product.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at its discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.



◯ Contents





3 x Pegs/Stuff Sack for Pegs

Camouflage Watch Tencho Camouflage Watch Tencho

mont-bell

User's Manual

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This product is a lightweight camouflage shelter that can also be used as a poncho. Perfect for bird watching and field research.

Components



Safety Warnings! Please read carefully.

WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

Never place a flame source in or near this product. Injury or death by fire and/or carbon monoxide poisoning is possible.

Oventilate the shelter at all times by keeping ventilators or door(s) open.

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.



CAUTION: Under certain conditions, use of this product can result in injury or property damage.

- \bigcirc The main body is made with synthetic fiber that is vulnerable to heat. Keep it away from bonfires and stoves.
- OUse pegs and guylines to stake the shelter at all times. Different pegs may be necessary depending on ground conditions, such as sand or snow.
- OChoose a site free of danger and as level as possible.
- OUltraviolet rays from the sun can damage the product's fabric. Sulfur gas from natural hot springs can also shorten the tent's lifespan.
- \bigcirc Be careful when handling pegs as they have sharp edges.

Directions

Directions (as a shelter) -

*When using as a shelter, a trekking pole with a maximum length of 120cm or more (or a prop that would work as a substitute) is necessary. Also possible to set up the shelter by hanging, passing a rope through the roof loop.

Fig. A

Loop

Peg

Pėg

Fig. B

Fig. C

- Take all the parts from the stuff sack. Check that the entrance is closed and spread it on the ground with the outer surface facing up. Be aware the product can be blown away by strong winds.
- Secure this product by staking three corners using peg loops. When staking the product on rocky or sandy grounds, consider using a mesh anchor or other types of pegs (sold separately).

*The peas are usually staked as in Fig. A, but the Tape height (the distance between the ground and the hem) can be adjusted by tying a knot as in Fig. B. You can set up the shelter as low as possible by staking pegs Loop using the tape loops (Fig. C).

- Ounzip the zipper and enter inside. Make sure to bring a trekking pole to use it as a prop when going inside. Close the zipper from the inside.
- Place an end of the prop on the top point of the roof, and push it up from the inside. Adjust the length of the prop to give the right amount of tension so that prop stands by itself at the upright position.

When using a trekking pole, make sure to use the grip side up and protect the fabric. When using a prop with a sharp end, make sure to cover the end and protect the fabric.

• You can increase the wind resistancy of the product by putting a rope or cord through the roof loop and fixing their ends. The roof loop can be used when hanging the product from a tree branch or others, enabling to set it up without using a prop.

O Directions (as a poncho)

*Suitable for those 150cm tall or taller. It can be worn over your backpack.

1Put the product on and close the entrance zipper. In order to avoid the hem from touching the ground, attach the inner loops inside to the toggles by the cuffs.



Fold the hem toward the inside and attach the inner loop to the toggle.

2Put your hands through the cuffs.

Do NOT walk without putting the hands out. It increases the risk of hurting yourself when falling or stumbling.



Care

Improper care and storage can shorten the lifespan of this product. To extend the lifespan of this product, please follow the recommendations below.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.
- Over time the material's water repellent treatment will deteriorate. To restore the water repellent abilities, reapply a water repellent spray (sold separately).
- ODo NOT dry clean or wash in washing machine. This can damage the fabric.
- Olf zipper movement becomes stiff, use Smooth Slider (sold separately) or candle wax to restore functionality.
- Ouse a damp cloth to clean the poles and pegs. Afterwards apply a silicone lubricant.