

## ■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。  
使用後や保管時は以下の点を参考にしてください。

- 汗による汚れや泥の汚れは水で軽く洗い流した後に中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干ししてください。
- ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。
- 乾燥機を使用しないでください。製品の寿命を縮める恐れがあります。
- 長期の使用により、はっ水性能(水を弾く力)が低下した場合は別売のはっ水スプレー等をご使用ください。

## ■ 保管方法

- 高温になる場所を避け、風通しの良い場所に保管してください。
- ガソリンやシンナーと一緒に保管しないでください。

## ■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

## ■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

## ■ 仕様・サイズ

| 【品 番】    | 【品 名】                       |
|----------|-----------------------------|
| #1133286 | アルパイン ライトバック 20             |
| #1133287 | アルパイン ライトバック 30             |
| #1133288 | アルパイン ライトバック 30 Women's 女性用 |
| #1133289 | アルパイン ライトバック 40             |
| #1133290 | アルパイン ライトバック 40 Women's 女性用 |
| #1133428 | アルパイン ライトバック 50             |
| #1133429 | アルパイン ライトバック 50 Women's 女性用 |

女性用は、機能、デザインはそのままに、背面長、ヒップベルト、ショルダーハーネスを女性の体に合わせて設定しています。身長145～165cmくらいまでの方に最適なモデルです。

【素 材】  
本体・トップリッド：30デニール・バリスティック®ナイロン・リップストップ [ウレタン・コーティング]  
側面・底部：[20.30.40L] 100デニール・バリスティック®ナイロン・リップストップ [ウレタン・コーティング]  
[50L] 210デニール・バリスティック®ナイロン・リップストップ [ウレタン・コーティング]  
背面：3D メッシュ  
アクアバリアサック：40デニール・ナイロン・リップストップ [ウレタン・コーティング]

## ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 **モンベル** 本 社 〒550-0013 大阪市西区新町2-2-2 モンベルホームページ <https://www.montbell.jp/>  
商品についてのお問い合わせはカスタマー・サービスまで Tel. 06-6531-3544 フリーコール：0088-22-0031

# mont・bell

## 共通取扱説明書

# アルパイン ライトバック シリーズ

## Alpine Light Pack Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

## ■ 特長


操作性と防水性に優れたロールアップシステムを搭載した軽量バックパックです。本体生地に超軽量と強度を両立した独自の素材を使用。防水性の内袋・アクアバリアサックを備え、高い防水性を発揮します。軽量性を重視しながらも、快適な背負い心地と多彩な機能を備えています。

※アクアバリアサックを装着した本製品は高い防水性を持ちますが、水中などで高い水圧がかかったり、雨中の行動が長時間に及ぶような場合は浸水する恐れがあります。

※通常の使用については十分な強度を持たせておりますが、過酷な使用状況や鋭利な岩角等で部分的に強い摩擦や衝撃が加わった際には生地の破損をまねく恐れがあります。

## ■ 各部の名称

※写真は40Lです。

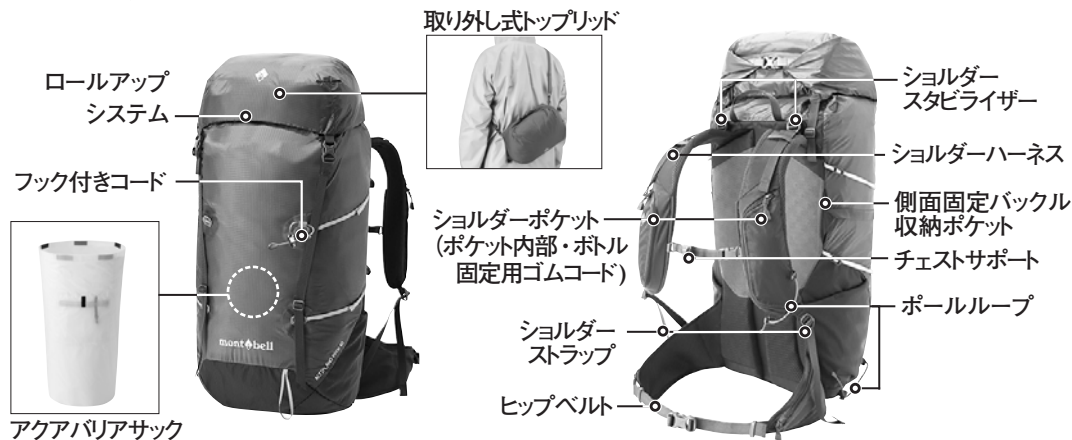

## ■ 安全上の注意

必ずお読みください

**警告** 場合により人が死亡または重傷を負う可能性が想定される内容です。  
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に能力が発揮できない恐れがあります。

○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

**注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

- アクアバリアサックを装着した本製品は高い防水性を備えますが完全防水ではありません。雨中の行動が長時間に及ぶ場合や、水中など高い水圧がかかるような状況では漏水する恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。


## ■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。  
異常が見られた場合は使用しないでください。


- ☐ 本体やアクアバリアサックに破れがないか
- ☐ バックルなどに破損がないか

## ■ 使用方法


### ○ロールアップの手順

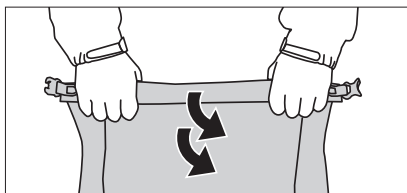

開口部を2回転以上巻き上げて、バックルを留めます。巻き上げる回数が少ないと水が浸入したり、荷物が落ちる恐れがあります。


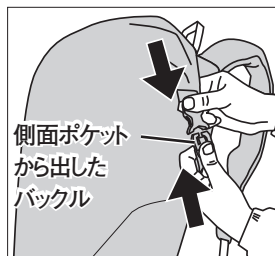


バックルは側面・トップ位置どちらでも固定できます。  
側面固定バックルは側面のポケットに収納されています。

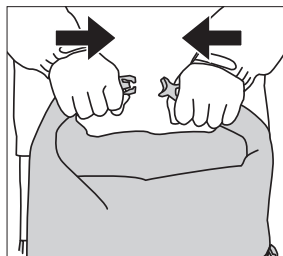


### ○本体とトップリッドの接続方法


本体とトップリッドの接続には各部位に配置されている計4ヶ所のバックルと接続テープを使用します。  
※販売時は装着されています。

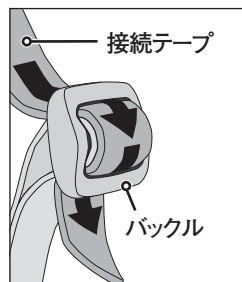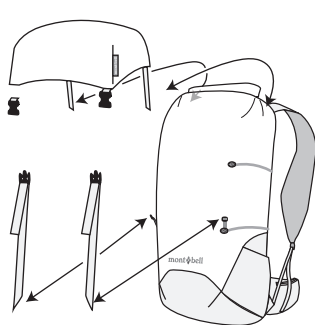

バックルに接続テープを通します。

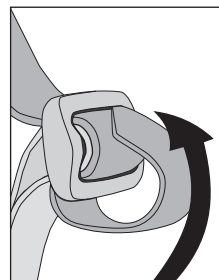



テープの末端を折り返します。

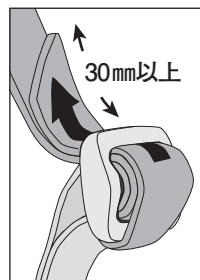


折り返した末端が30mm以上になるように締め込んでください。

### ○ショルダーポーチとしての使用方法

トップリッドに付属の専用ショルダーベルトを取り付けて、ショルダーポーチとして単体で使用できます。トップリッドとショルダーベルトの接続は上図と同じ方法で行います。

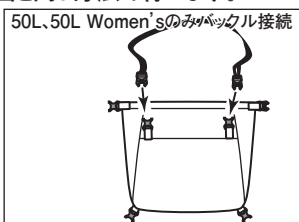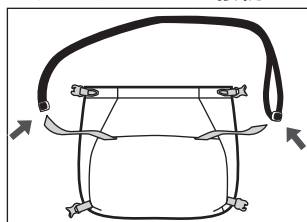

### ○アクアバリアサックの取り付け方法

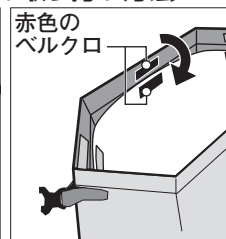


本製品にアクアバリアサックを入れ、本体背面のフック(1ヶ所)と開口部にあるベルクロ(5ヶ所)で接続します。  
※赤色のベルクロが前側の中心になります。  
※販売時は装着されています。


※荷物を満載した状態でアクアバリアサックを無理に抜かないでください。アクアバリアサックに負荷がかかり、破損する場合があります。

### ○トレールウォーターパック(別売)取り付け方法

トレールウォーターパックは荷物を降ろさずに行動しながら水分補給ができる、チューブで給水するソフトタイプのボトルです。  
装着の際はトレールウォーターパック付属の取扱説明書も併せてご覧ください。

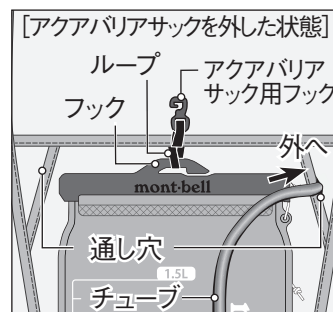

アクアバリアサックの本体接続ベルクロとフックを外します。トレールウォーターパックのスライドパーツのフックを荷室内上部の図のループに掛けて装着し、図の通し穴からバックパックの外にチューブを出します。左右の通し穴のどちらからでも出すことができます。

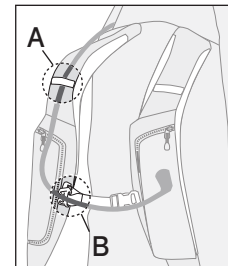


チューブをショルダーハーネスのループ(A)に通し、飲み口の位置を調節します。チェストサポートに付いている固定用クリップ(B)も併用します。アクアバリアサックのフックとベルクロを再装着します。

※図は40Lです。バック容量により通し穴の位置は若干異なります。


### ○フィッティングの手順

バックがジャストフィットしている状態とは、バックパネルとショルダーハーネスが体に隙間無く接している状態のことをいいます。ご使用にあたっては、ご自身の体格に合わせて、適切なフィッティングを行ってください。


本製品の各バックルに通したテープをあらかじめ適度に緩めておきます。また、実際の使用状態での正しいポジションを得るために、まず 10kg 程度の荷物をバックに入れます。

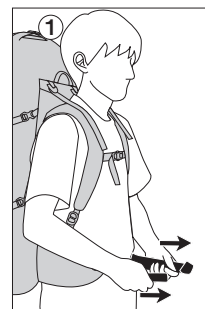


バックを背負い、腹部を圧迫しないように腰骨部分でヒップベルトを締める。

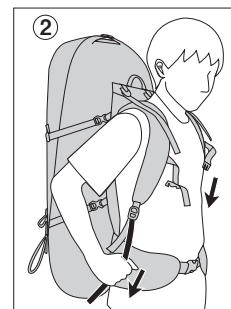

ショルダーハーネスが体にフィットするようにショルダーストラップを引く。

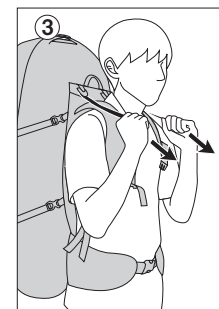

ショルダースタビライザーを引き、上部の重心を体に引き寄せ安定させる(40,50Lのみ)。

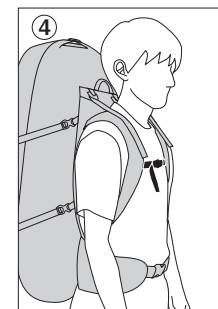

ショルダーハーネスを安定させるためにチェストサポートを留める。

以上で、本製品の基本的なフィッティングは完了です。ただし、各テープ類の長さは身に着ける服によっても変わりますので、その都度の微調節が必要です。苦しくない範囲でしっかり締めてください。

## Care

Improper care and storage will shorten the lifespan of this product.  
Please review the following instructions for care and storage.

- To clean stains and soiling, lightly rinse off and use a mild soap with a sponge to brush away any remaining residue. Rinse off and dry in the shade. Do NOT dry clean. This can damage the product's fabric.
- Do NOT dry clean or wash in a washing machine. This can damage the product's fabric.
- Do NOT dry in a dryer. Shorten the product's lifespan.
- Water repellency will decrease over time. To restore water repellency, first clean any residues from the fabric surface and then apply a water repellent spray (sold separately).

## Storage

- Store in a well ventilated, cool, dry place.
- Do NOT store together with gasoline or paint thinner.

## Disposal

- Please follow local regulations regarding waste disposal.

## Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at montbell's discretion. This warranty does not cover damage caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

## Specifications

| [Style]  | [Name]                       |
|----------|------------------------------|
| #1133286 | Alpine Light Pack 20         |
| #1133287 | Alpine Light Pack 30         |
| #1133288 | Alpine Light Pack 30 Women's |
| #1133289 | Alpine Light Pack 40         |
| #1133290 | Alpine Light Pack 40 Women's |
| #1133428 | Alpine Light Pack 50         |
| #1133429 | Alpine Light Pack 50 Women's |

Women's model : Without changing design or functionality, the hipbelt, shoulder harnesses, and back length have been adjusted to better fit the female form. This model is ideal for heights between 145cm and 165cm.

### [Material]

Main / Top lid : 30-denier urethane coated rip-stop Ballistic nylon  
Side / Bottom : [20,30,40L]100-denier urethane coated rip-stop Ballistic nylon  
[50L]210-denier urethane coated rip-stop Ballistic nylon  
Back : 3D mesh  
Aqua Barrier Sack : 40-denier urethane coated rip-stop nylon

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

<https://www.montbell.jp/>

# mont-bell

## User's Manual

# Alpine Light Pack Series

## Alpine Light Pack Series

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

## Description

Features a user-friendly roll-up closure and Aqua Barrier Sack to provide an excellent level of water protection. The main body is made of an ultra lightweight yet highly durable fabric. While lightweight, the pack provides great comfort and functionality.

\*Although this product has a high degree of water-resistant, it is not completely waterproof. Water can eventually penetrate into the backpack, for example if used for an extended period of time in the rain.

\*To prevent tears and damage, do NOT use in extreme conditions, near sharp objects, rough surfaces, and for any other activity for which it was not designed.

## Components

\*40L model



## Safety Warnings! Please read carefully.



### WARNING!

Under certain conditions, use of this product can result in injury, death, or property damage.

- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

**CAUTION!** Under certain conditions, use of this product can result in injury or property damage.


- Although this product has a high degree of water protection, it is not completely waterproof. Water can eventually penetrate into the backpack, for example if used for an extended period of time in the rain.
- Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or other irregularities.

**Prior to use, inspect this product for:** Stop using immediately if you notice any irregularities.


- ☐ Damage to the fabric and Aqua Barrier Sack
- ☐ Damage to the buckles

## Directions


### Roll-Up Closure

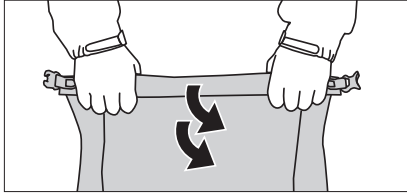

Fold the top fabric together 2 or more times and fasten the buckles. \*Make sure to fold over the roll-up closure enough times to prevent water from coming in and the pack contents from falling out.


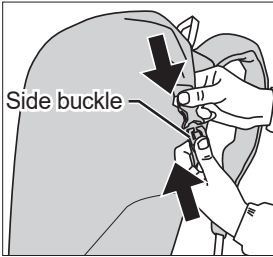


Buckle can be fastened either on the top or the side of the backpack.

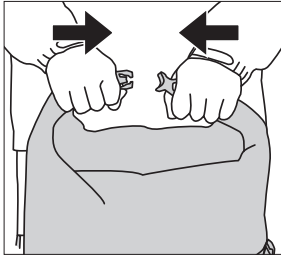


### Using the Top Lid


Attach the top lid to the pack with the 4 ladder lock buckles and corresponding straps.

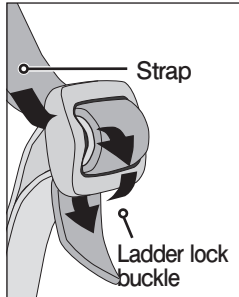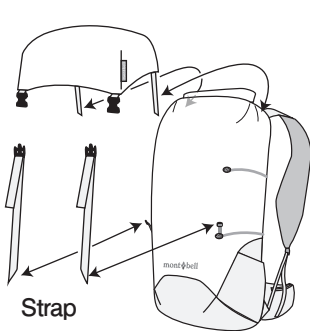

Pass the strap through the ladder lock buckle.

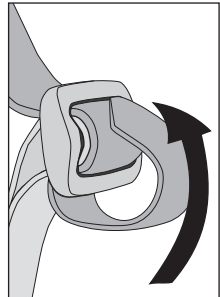



Double back the strap through the ladder lock buckle.

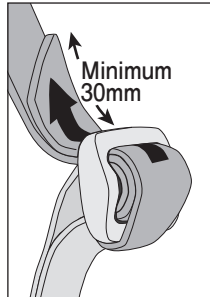



Make sure that the remaining strap length is longer than 30mm.

### Using the top lid as a shoulder pouch

Detach the top lid and connect the shoulder belt to use as a shoulder pouch. Connect the shoulder belt to the top lid as shown above.

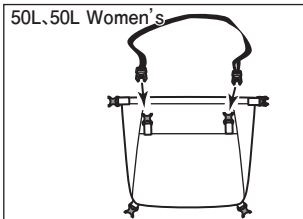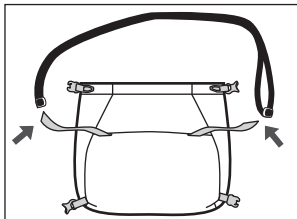

### Aqua Barrier Sack

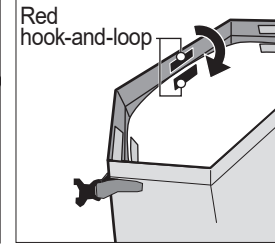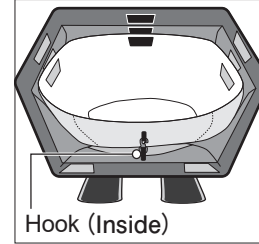


Place the sack inside the backpack, attach the inner hook, and secure the (5) red hook-and-loop fasteners. \*The red hook-and-loop fastener comes to the front-center. \*The sack is equipped inside the backpack.


Do NOT remove the Aqua Barrier Sack when fully loaded. May damage or rip the sack.

### This pack is compatible with the Trail Water Pack (sold separately)

A hydration bladder with a tube that allows you to drink while moving, without needing to put your pack down. When installing, also refer to the Trail Water Pack instruction manual.

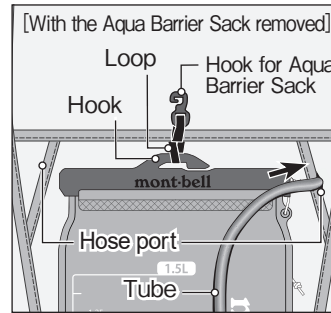

Detach the Aqua Barrier Sack from the inner hook, and unfasten the hook-and-loop fasteners. Hang the hook connected to the Trail Water Pack from the loop on the inner hook as shown in the figure. Pull the hose through the hose port on the left or right side depending on your preference.

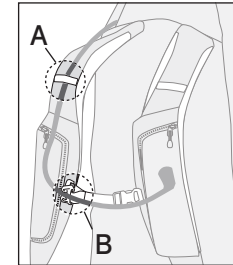


Pass the hose through the loop on the shoulder harness (A) and adjust the position of the mouth piece. The hose can be clipped onto the sternum strap (B). Put the Aqua Barrier Sack back in place by securing the inner hook and hook-and-loop fasteners.

※Illustration shows a 40L pack. Position of the hose ports may vary slightly depending on pack capacity.


### Fitting Process

The correct fit is achieved when the back panel and shoulder harness fit the body without any gaps. When using the pack, ensure that it is properly fitted according to your own physique.


Before starting, unbuckle and loosen all straps. To simulate conditions during actual use, load about 10kg of weight into the backpack.

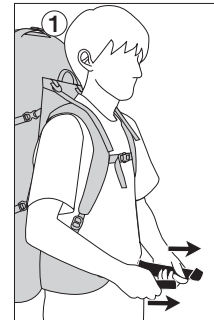


Shoulder the product and fasten the hipbelt, taking care not to put pressure on your abdomen.

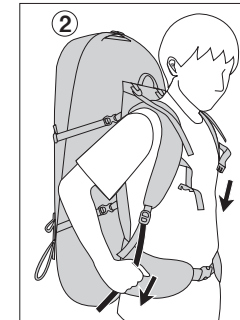

Pull the shoulder straps so that they tighten around your shoulders and armpits.

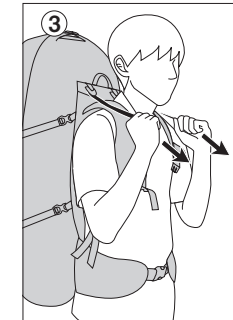

Pull the load lifters to draw the backpack's center of gravity in closer to your body. (only for 40L/50L models)

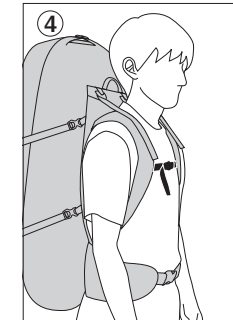

Fasten the sternum strap and adjust its position to about 5cm below your collarbone to prevent the shoulder harnesses from shifting position.

The fitting of your backpack is now complete. Depending on what you wear you may need to make minor adjustments to the shoulder straps, load lifters, and hipbelt straps. Fasten straps so that they are secure, but do not cause discomfort.