

アルフェック フットブレイス

ARFEQ Foot-Brace

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。ただし、本説明書は本製品の基本的な使用方法を示すものです。安全な条件のもとで十分な練習を行い、正しい使用方法を習得してください。なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

カヤック乗艇時に本製品を装着し、足を置くことで効率的なパドリングができます。アルフェック専用です。

■ 安全上の注意 必ずお読みください

警告 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品はカヌー・カヤック用に設計されています。他の用途には使用しないでください。

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 本製品は、アルフェック用として開発されています。アルフェック以外の艇では使用しないでください。
- 使用方法をご覧のうえ、艇に合わせてサイズを正しく調節してください。正しく調節しないと本来の性能が発揮できない恐れがあります。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に本来の性能が発揮できない恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。異常が見られた場合は使用しないでください。

- ☐ テープにほつれ等がないか ☐ バックルにひびや割れがないか


■ 使用方法

対応表		フットブレイス品番			フットブレイス品番		
		#2351108	#2351109	#2351110	#2351108	#2351109	#2351110
アルフェック本体品番	品名	シート位置	28cm	35cm	50cm	アルフェック本体品番	品名
2341006	ウムナック350	一人乗り	×	○	×	2341028 (2341022)	ボイジャー 415
2341007	ウムナック380	前席	×	×	×	2341029 (2341023)	ボイジャー 460T
2341007	ウムナック380	中席	○	×	×	2341029 (2341023)	ボイジャー 460T
2341007	ウムナック380	後席	×	×	○	2341029 (2341023)	ボイジャー 460T
2341031 (2341025)	アリユート380T	前席	×	×	×	2341030 (2341024)	ボイジャー 520T
2341031 (2341025)	アリユート380T	中席	○	×	×	2341030 (2341024)	ボイジャー 520T
2341031 (2341025)	アリユート380T	後席	×	×	○	2341034 (2341021)	エルズミア480
2341032 (2341026)	アリユート430T	前席	○	×	×	2341035 (2341018)	エルズミア530
2341032 (2341026)	アリユート430T	中席	○	×	×	2341033 (2341019)	エルズミア570T
2341032 (2341026)	アリユート430T	後席	×	×	○	2341033 (2341019)	エルズミア570T

※表にない艇はお問い合わせください。

○ 取り付け方法

- ① 本製品の後バックルをはずし、バウ（船首）側のクロスリブに調整ゴムストラップを通します。（写真1）
 - ② フットブレイス本体を①で艇に取付けたパーツに接続します。
 - ③ 後バックルをはずし、スターン（船尾）側のクロスリブにテープを通します。（写真2）
 - ④ 船体布をセットする前に、前の調整ストラップを適当な長さまで引いてください。
 - ⑤ 艇の組み立てが終わった後に、後の調整ストラップを適当な長さまで引いてください。
- ※一度、長さを調節すると、次回からは、より早い組み立てができます。
- ※必ず、クロスリブに取付けるようにしてください。それ以外の場所はフレームが破損する恐れがありますのでご注意ください。

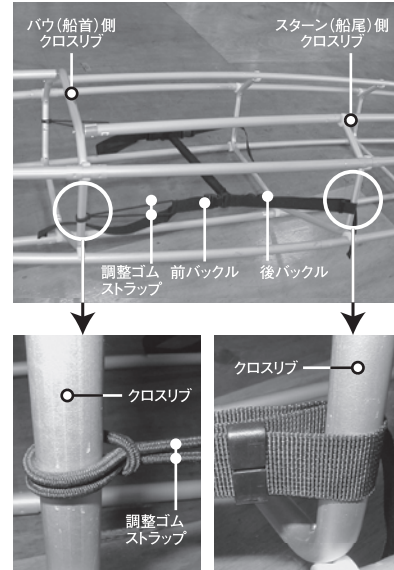

■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- ご使用後は、真水で砂や汚れを洗い流してから陰干しをしてください。

■ 保管方法

- 保管場所は直射日光の当たらない風通しの良い場所を選んでください。
- 本製品を火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
 - 間違ったお手入れ、保管方法、経年変化による素材劣化
 - 乱暴な取り扱いによるもの
 - その他、製造上の欠陥以外の原因によるもの
- 破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

品番：2351108、2351109、2351110 品名：アルフェック フットブレイス 28cm、35cm、50cm

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

ARFEQ Foot-Brace

ARFEQ Foot-Brace

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product. Please understand this manual only explains how to use the product and does not go into detail regarding using the product safely. You are personally responsible for learning the proper techniques and safety procedures for using this equipment. If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This product is specially designed for the ARFEQ series. Attach the foot-brace to the kayak for effective paddling.

Safety Warnings! Please read carefully.

⚠ WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

○ Use ONLY on canoes and kayaks. Do NOT use this product for any other activity for which it was not designed.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

○ This product is specially designed for ARFEQ series. Do NOT use on other canoes or kayaks.

○ Please follow recommended sizing instructions. Improper sizing adjustment can lead to decrease in performance.

○ Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.

○ Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.

○ Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

Prior to use, inspect this product for:

☐ Damages or frays on the straps. ☐ Damages on buckles

Directions

Compatibility chart			Foot-Brace		
			#2351108	#2351109	#2351110
ARFEQ	Name	Seat position	28cm	35cm	50cm
2341006	OMNAK350	One person	×	○	×
2341007	OMNAK380	Front seat	×	×	×
2341007	OMNAK380	Middle seat	○	×	×
2341007	OMNAK380	Back seat	×	×	○
2341031 (2341025)	ALEUT380T	Front seat	×	×	×
2341031 (2341025)	ALEUT380T	Middle seat	○	×	×
2341031 (2341025)	ALEUT380T	Back seat	×	×	○
2341032 (2341026)	ALEUT430T	Front seat	○	×	×
2341032 (2341026)	ALEUT430T	Middle seat	○	×	×
2341032 (2341026)	ALEUT430T	Back seat	×	×	○

※Please contact Montbell Customer Service for unlisted models.


			Foot-Brace		
			#2351108	#2351109	#2351110
ARFEQ	Name	Seat position	28cm	35cm	50cm
2341028 (2341022)	VOYAGER415	One person	×	○	×
2341029 (2341023)	VOYAGER460T	Front seat	○	×	×
2341029 (2341023)	VOYAGER460T	Middle seat	○	×	×
2341029 (2341023)	VOYAGER460T	Back seat	×	×	○
2341030 (2341024)	VOYAGER520T	Front seat	○	×	×
2341030 (2341024)	VOYAGER520T	Middle seat	○	×	×
2341030 (2341024)	VOYAGER520T	Back seat	×	×	○
2341034 (2341021)	ELLSMERE480	One person	×	○	×
2341035 (2341018)	ELLSMERE530	One person	×	○	×
2341033 (2341019)	ELLSMERE570T	Front seat	○	×	×
2341033 (2341019)	ELLSMERE570T	Front seat	×	×	○

※Please contact Montbell Customer Service for unlisted models.

		Foot-Brace			
		#2351108	#2351109	#2351110	
ARFEQ	Name	Seat position	28cm	35cm	50cm
2341028 (2341022)	VOYAGER415	One person	×	○	×
2341029 (2341023)	VOYAGER460T	Front seat	○	×	×
2341029 (2341023)	VOYAGER460T	Middle seat	○	×	×
2341029 (2341023)	VOYAGER460T	Back seat	×	×	○
2341030 (2341024)	VOYAGER520T	Front seat	○	×	×
2341030 (2341024)	VOYAGER520T	Middle seat	○	×	×
2341030 (2341024)	VOYAGER520T	Back seat	×	×	○
2341034 (2341021)	ELLSMERE480	One person	×	○	×
2341035 (2341018)	ELLSMERE530	One person	×	○	×
2341033 (2341019)	ELLSMERE570T	Front seat	○	×	×
2341033 (2341019)	ELLSMERE570T	Front seat	×	×	○

Attaching the foot-brace

- ① Detach the front buckle, loop the adjustable elastic strap around the bow's cross rib. (See Fig. 1)
- ② Then reconnect the foot-brace to the elastic strap's buckle.
- ③ Detach the rear buckle, pass the strap around the stern's cross rib and reconnect the buckle. (See Fig. 2)
- ④ Before putting the kayak's cover on, adjust the front strap length.
- ⑤ After setting up the kayak, adjust the rear strap length.
 - ※ Setup is quicker after the strap lengths have been properly adjusted.
 - ※ Only connect this product to the cross ribs. Attaching to any other position of the kayak will damage the frame.

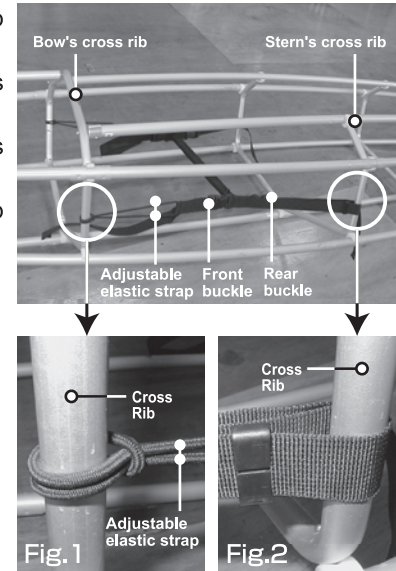

Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool, well ventilated area.

Storage

- When storing for an extended period of time, store in a well ventilated, cool, dry place out of direct sunlight.
- To prevent deforming and damage, do not store near heat sources.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style: #2351108, #2351109, #2351110 Name: ARFEQ Foot-Brace 28cm, 35cm, 50cm

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

www.montbell.com